

JET

JWBS-20Q WOODWORKING BANDSAW

JWBS-20Q-M...708752BM...1~230V, 50Hz

JWBS-20Q-T ...708752BT ...3~400V, 50Hz

PARTS LIST


JPW (Tool) AG
Tämperlistrasse 5
CH-8117 Fällanden
Switzerland
Phone +41 44 806 47 48
Fax +41 44 806 47 58

www.jettools.com

P-708752BM / 708752BT 2014-10

CE

Upper Wheel Assembly

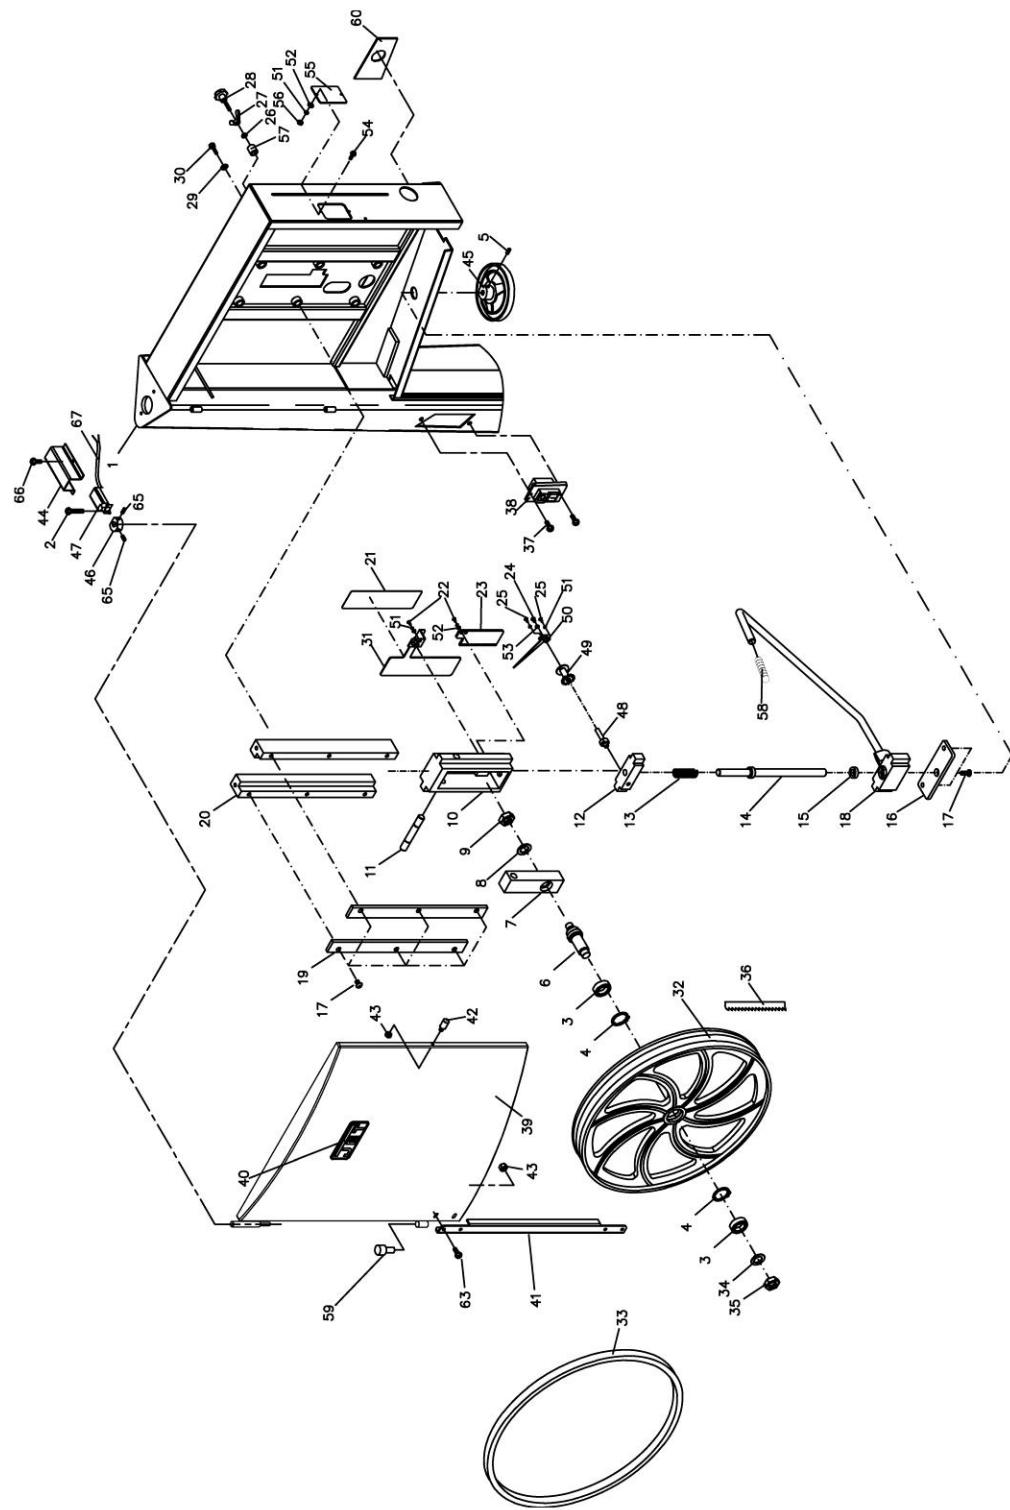


Upper Wheel Assembly

Index No.	Part No.	Description	Size	Qty
1.....	JWBS20QT-501E.....	Saw Body		1
2.....	TS-2284302.....	Screw.....	M4x30.....	2
3.....	BB-6205ZZ	Ball Bearing	6205	2
4.....	JWBS20QT-504	Retaining Ring.....	R52.....	2
5.....	TS-0270051.....	Set Screw	5/16-18x1/2	1
6.....	JWBS20QT-506	Upper Wheel Shaft		1
7.....	JWBS20QT-507	Upper Wheel Shaft Bracket		1
8.....	TS-155010.....	Flat Washer	M16	1
9.....	JWBS18-214	Hex Nut.....	5/8-18 UNF R.H	1
10.....	JWBS20QT-510	Upper Wheel Bracket Base		1
11.....	JWBS20QT-511	Bracket Shaft.....		1
12.....	JWBS20QT-512	Elevator Bracket		1
13.....	JWBS20QT-513	Spring		1
14.....	JWBS20QT-514	Adjustment Screw		1
15.....	JWBS20QT-515	Thrust Bearing		1
16.....	JWBS20QT-516	Plate		1
17.....	PM1800-118.....	Button Head Socket Screw	3/8-16x3/4	8
18.....	JWBS20QT-518	Blade Tension Arm Assembly		1
19.....	JWBS20QT-519	Plate		2
20.....	JWBS20QT-520	Support Bracket.....		2
21.....	JWBS20QT-521E....	Blade Width/Tension Scale		1
22.....	TS-0206021.....	Socket Head Cap Screw	#10-24x1/2	4
23.....	JWBS20QT-523	Rack		1
24.....	TS-0254031.....	Button Head Socket Screw	1/4-20x5/8	1
25.....	TS-081C022	Pan Head Machine Screw.....	#10-24x3/8	2
26.....	TS-0720091.....	Lock Washer.....	3/8	1
27.....	JWBS20QT-527	Wing Nut.....	3/8	1
28.....	JWBS20QT-528	Lock Knob.....		1
29.....	TS-0680041.....	Flat Washer	3/8	6
30.....	TS-0060061.....	Hex Cap Screw	3/8-16x1-1/4	6
31.....	JWBS20QT-531	Blade Width Gauge Plate		1
32.....	JWBS20QT-532	Upper Wheel.....		1
33.....	JWBS20-21	Tire		1
34.....	TS-0680091.....	Flat Washer	3/4	1
35.....	JWBS20-22	Hex Nut.....	3/4-16UNF L.H.	1
36.....	JWBS20QT-536	Blade.....	150”L x 1”W x 0.028”T x 3TPI	1
37.....	TS-1532032.....	Screw.....	M4x10.....	2
38.....	JWBS18Q-107E	Magnetic Switch	1Ph	1
	JWBS18Q-107AE....	Magnetic Switch	3Ph	1
39.....	JWBS20Q-139E	Upper Front Door		1
40.....	JWBS18-140	JET Plaque		1
41.....	JWBS18DX-155AE .	Door Plate.....		1
42.....	JWBS20-542	Door Stud		1
43.....	TS-0561011.....	Hex Nut.....	1/4x20.....	5
44.....	JWBS18-149E.....	Switch Cover		1
45.....	JWBS20QT-545	Hand Wheel.....		1
46.....	JWBS18-146E.....	Set Block		1
47.....	JWBS18DX-147E....	Limited Switch		1
48.....	JWBS20QT-548	Scale Shaft		1
49.....	JWBS20QT-549	Gear Wheel		1
50.....	JWBS20QT-550	Pointer		1
51.....	TS-0720051.....	Lock Washer.....	#10	8
52.....	TS-069204.....	Flat Washer	#10	6

Index No.	Part No.	Description	Size	Qty
53.....	TS-0720071.....	Lock Washer.....	1/4	2
54.....	TS-081C032	Pan Head Machine Screw.....	#10-24x1/2	2
55.....	JWBS18DX-147	Tracking Window.....		1
56.....	TS-0560071.....	Hex Nut.....	#10-24	2
57.....	2013-333	Spacer		1
58.....	JWBS18DXA-164....	Grip		1
59.....	JWBS18-39A.....	Door Hinge Pin		2
60.....	JWBS20QT-560E....	Tension Status Label.....		1
63.....	TS-0813051.....	Screw.....	1/4-20x5/8	4
65.....	TS-0267041.....	Set Screw	1/4-20 x3/8	2
66.....	TS-1480031.....	Screw.....	M4x12.....	2
67.....	JWBS18DX-151E....	Switch Cord (Switch to Limit Switch).....		1

Lower Wheel and Motor Assembly

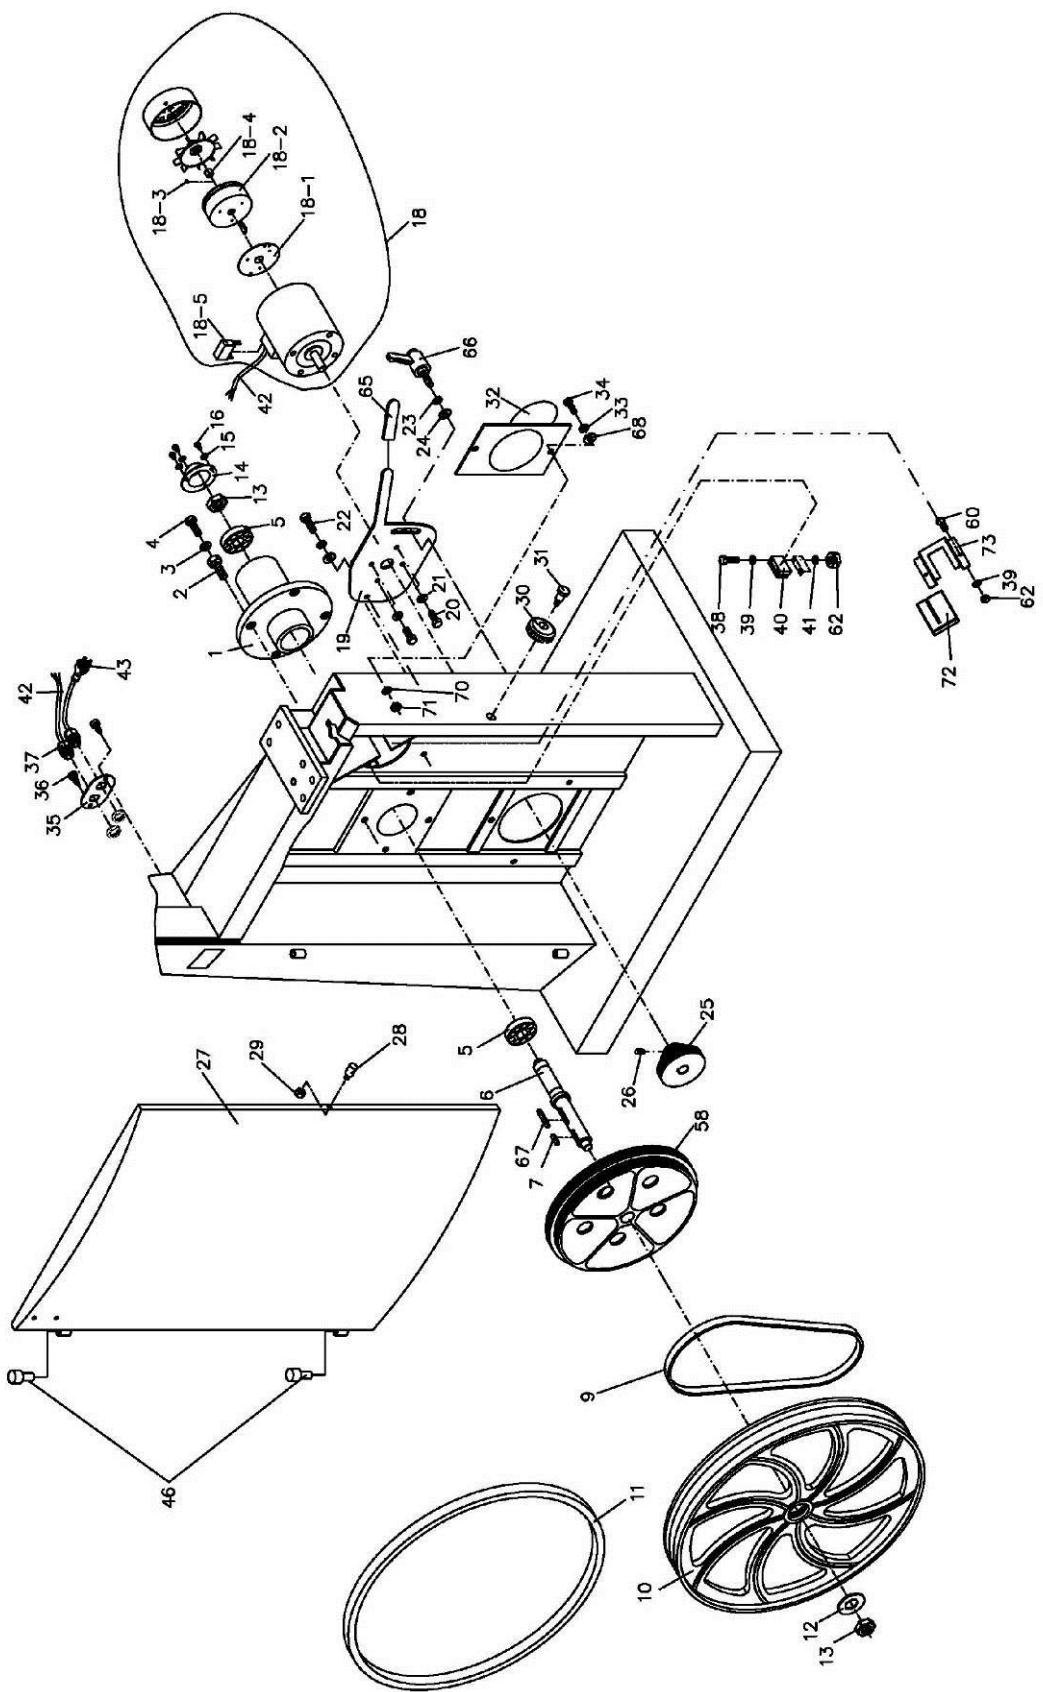


Lower Wheel and Motor Assembly

Index No.	Part No.	Description	Size	Qty
1.....	JWBS20-201	Bearing Base		1
2.....	JWBS20-62	Adjusting Bolt		4
3.....	TS-0720091	Lock Washer.....	.3/8	6
4.....	TS-0060111	Hex Cap Screw3/8x2-1/2	4
5.....	BB-6206ZZ	Ball Bearing6206	2
6.....	JWBS20QT-206	Spindle.....		1
7.....	JWBS20-49	Key7x7x25	1
9.....	JWBS20QT-209E	V-Belt.....		1
10.....	JWBS20-532	Lower Wheel.....		1
11.....	JWBS20-21	Tire		1
12.....	TS-0680091	Flat Washer3/4	1
13.....	JWBS20-22	Hex Nut.....	.3/4-16UNF L.H	1
14.....	JWBS20-214	Hex Nut.....	.3/4-16UNF R.H	1
15.....	JWBS20-215	Bearing Cover		1
16.....	TS-0720071	Lock Washer.....	.1/4	3
17.....	JWBS20-217	Screw.....	.1/4x3/8	3
18.....	JWBS20Q-218E	Motor2HP, 1Ph, 230V	1
	JWBS20Q-218AE	Motor3HP, 3Ph, 400V	1
	JWBS20-RCE	Running Capacitor (not shown).....	.30uF, 450V	1
	JWBS20-CCE	Capacitor Cover (not shown).....		1
	JWBS20X-FAN	Fan (not shown)		1
	JWBS20Q-MFCE	Motor Fan Cover (not shown)		1
18-1.....	JWBS18Q-PE	Plate		1
18-2.....	2415-426BME	Brake Magnet		1
18-3.....	JWBS18DX-KE	Key		1
18-4.....	2415-426BE	Block		1
18-5.....	JWBS18DX-RE	Rectifier		1
19.....	JWBS20QT-219	Motor Bracket		1
20.....	TS-0081031	Hex Cap Screw5/16-18x3/4	4
21.....	TS-0680031	Flat Washer5/16	4
22.....	TS-0060051	Hex Cap Screw3/8-16x1	1
23.....	TS-0720091	Lock Washer.....	.3/8	2
24.....	TS-0680041	Flat Washer3/8	2
25.....	JWBS20QT-225E	Motor Pulley.....		1
26.....	TS-0270031	Set Screw5/16-18x3/8	2
27.....	JWBS20QT-227E	Lower Front Door		1
28.....	JWBS20-542	Door Stud		1
29.....	TS-0561011	Hex Nut.....	.1/4-20	1
30.....	JWBS20-2	Lock Knob		1
31.....	TS-081F052	Pan Head Machine Screw1/4-20x3/4	1
32.....	JWBS18-232E	Dust Chute		1
33.....	TS-0680031	Flat Washer5/16	2
34.....	TS-0051051	Hex Cap Screw5/16-18x1	2
35.....	JWBS18-235E	Cord Plate		1
36.....	TS-081C032	Pan Head Machine Screw#10-24x1/2	2
37.....	54A-S39	Strain Relief BushingPG-11	2
38.....	TS-081C082	Pan Head Machine Screw#10-24x1-1/2	2
39.....	TS-069204	Flat Washer#10	4
40.....	JWBS18-240	Brush		1
41.....	TS-0720051	Lock Washer#10	2
42.....	JWBS18DX-243E	Motor Cord (Motor to switch)1Ph	1
	JWBS18DX-243AE	Motor Cord (Motor to switch)3Ph	1
43.....	JWBS18DX-244E	Power Cord1Ph	1
	JWBS18DX-244AE	Power Cord3Ph	1
46.....	JWBS18-39A	Door Hinge Pin		2
58.....	JWBS20QT-258	Spindle Pulley		1

Index No.	Part No.	Description	Size	Qty
60.....	TS-081C032	Pan Head Machine Screw.....	#10-24x1/2	6
62.....	TS-0560071.....	Hex Nut.....	#10-24	2
65.....	JWBS18DXA-262....	Grip.....	1
66.....	JWBS18DXA-263....	Lock Handle.....	1
67.....	JWBS20QT-267	Key	7x7x40	1
68.....	JWBS18DX-254	Plastic Washer	1
70.....	TS-0720081.....	Lock Washer.....	5/16	2
71.....	TS-0561021.....	Hex Nut.....	5/16-18	2
72.....	JWBS18DX-249	Bracket	1
73.....	JWBS18DX-250	Shelf	1
74.....	JWBS20Q-274E	I.D Label (not shown)	1Ph	1
.....	JWBS20Q-274AE....	I.D Label (not shown)	3Ph	1
75.....	JWBS18QT-264	TSC-Sticker	1

Blade Guide Assembly

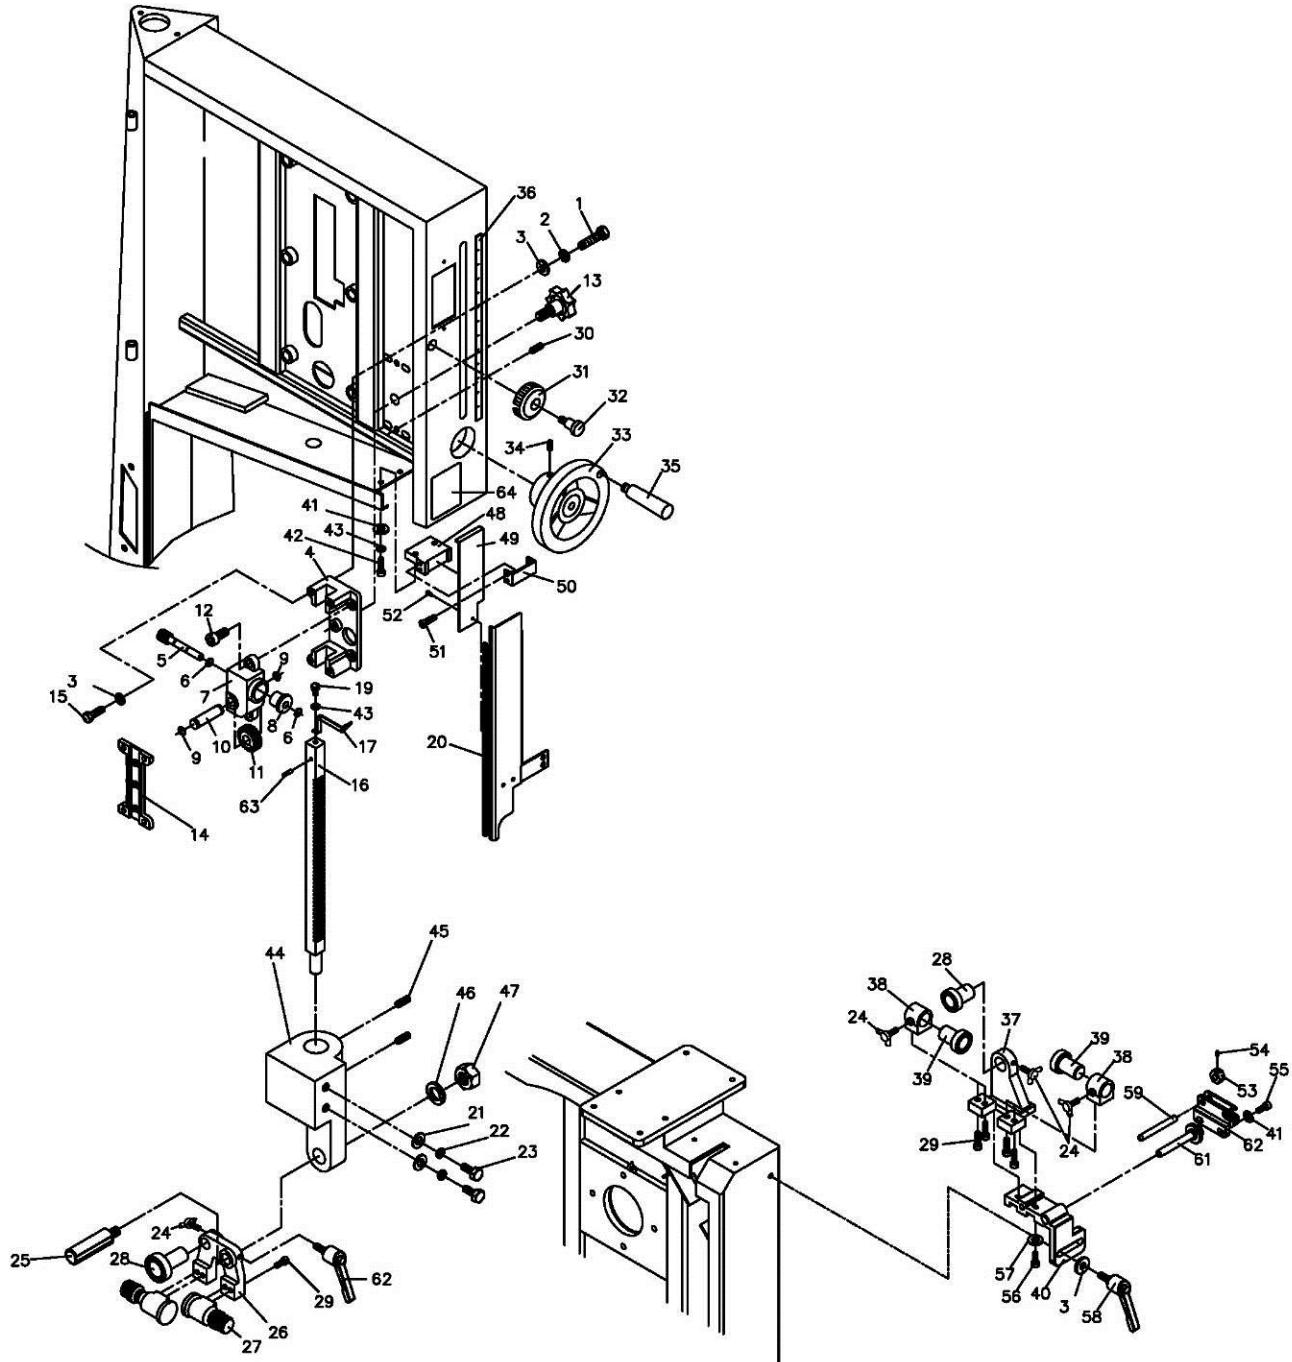

Blade Guide Assembly

Index No.	Part No.	Description	Size	Qty
1.....	TS-0051051.....	Hex Cap Screw5/16-18x1	4
2.....	TS-0720081.....	Lock Washer.....	.5/16	4
3.....	TS-0680031.....	Flat Washer5/16	8
4.....	JWBS20-304	Guide Bar Bracket		1
5.....	JWBS18-305	Worm		1
6.....	JWBS18-306	E-Ring.....	.E-8.....	2
7.....	JWBS18-307	Gear Base		1
8.....	JWBS18-308	Bushing.....		1
9.....	JWBS18-309	C-RingS-12.....	2
10.....	JWBS18-310	Shaft		1
11.....	JWBS18-311	Gear.....		1
12.....	TS-0208071.....	Socket Head Cap Screw5/16-18x1-1/4	2
13.....	JWBS20-313	Lock Knob.....	.5/16	1
14.....	JWBS20-314	Plate		1
15.....	TS-0051011.....	Hex Cap Screw5/16-18x1/2	4
16.....	JWBS20-316	Guide Bar		1
17.....	JWBS20QT-317	Pointer		1
19.....	TS-0050011.....	Hex Cap Screw1/4-20x1/2	1
20.....	JWBS20-318E	Blade Guard		1
21.....	TS-0680021.....	Flat Washer1/4	6
22.....	TS-0720071.....	Lock Washer.....	.1/4	2
23.....	TS-0050021.....	Hex Cap Screw1/4-20x5/8	2
24.....	JWBS20-324	Wing Bolt		4
25.....	JWBS20-325	Bracket Shaft.....		1
26.....	JWBS20-115	Upper Guide Bracket.....		1
27.....	JWBS20-114	Guide Wheel Assembly		2
28.....	JWBS20-113	Blade Support Shaft w/ Bearing		2
29.....	TS-0207021.....	Socket Head Cap Screw1/4-20x1/2	9
30.....	TS-0267041.....	Set Screw1/4-20x3/8	2
31.....	JWBS20-2	Lock Knob.....		1
32.....	TS-081F052	Pan Head Machine Screw1/4-20x3/4	1
33.....	JWBS18-333	Hand Wheel.....		1
34.....	TS-0267041.....	Set Screw1/4-20x3/8	1
35.....	JWBS20-103A	Handle		1
36.....	JWBS20-336E	Cutting Height Scale.....		1
37.....	JWBS18DX-337E	Bracket		1
38.....	JWBS18-338	Lower Guide Wheel Housing		2
39.....	JWBS18-339	Lower Guide Wheel Assembly		2
40.....	JWBS18DX-338	Base		1
41.....	TS-0680021.....	Flat Washer1/4	4
42.....	TS-0050021.....	Hex Cap Screw1/4-20x5/8	2
43.....	TS-0720071.....	Lock Washer.....	.1/4	5
44.....	JWBS20Q-344E	Guide Bar Bracket		1
45.....	TS-0270031.....	Set Screw5/16-18x3/8	2
46.....	TS-0720111.....	Lock Washer.....	.1/2	1
47.....	TS-0 561051.....	Hex Nut.....	.1/2-13	1
48.....	JWBS20Q-348E	Upper Guard Bracket		1
49.....	JWBS20-349	Upper Blade Guard		1
50.....	JWBS18-347E	Bracket Cover		1
51.....	JWBS18-345E	Philips Screw#10-24x3/8	4
52.....	JWBS18-352E	Pin3x12	1
53.....	JWBS18DX-363	Nut		1
54.....	TS-0267021	Set Screw1/4-20x1/4	1
55.....	TS-0207041	Socket Head Cap Screw1/4-20x3/4	2
56.....	TS-0206031	Socket Head Cap Screw#10-24x5/8	2

Index No.	Part No.	Description	Size	Qty
57	TS-0680011	Flat Washer	#10	2
58.....	JWBS18DX-359	Locking Handle.....	1
59.....	JWBS18DX-360	Shaft	1
61.....	JWBS18DX-361	Adjusting Screw.....	1
62.....	JWBS18DX-362	Adjusting Bracket	1
63.....	JWBS20Q-363E	Pin	Ø5x10.....	1
64.....	JWBS18-348E	Blade Direction Label	1

Table and Fence Assembly

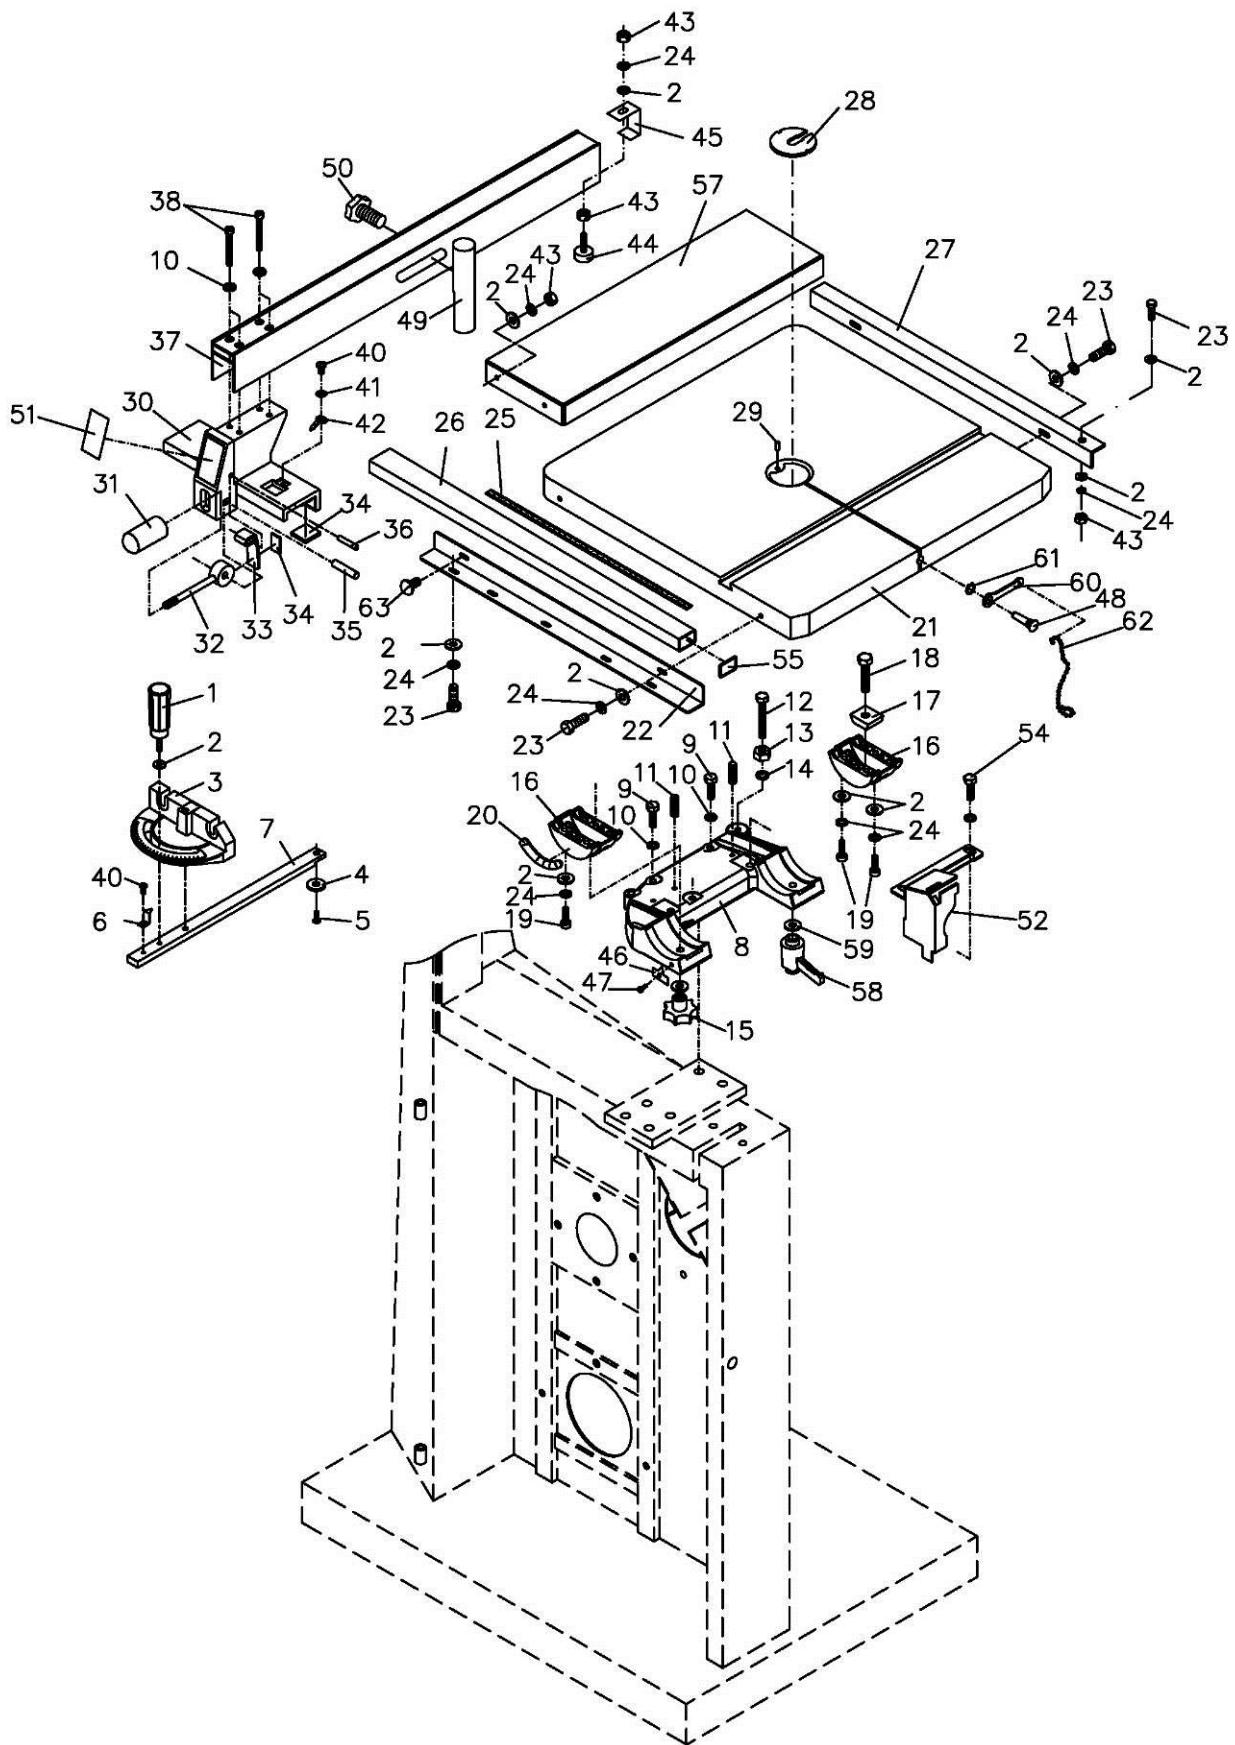



Table and Fence Assembly

Index No.	Part No.	Description	Size	Qty
1	JWBS18-401	Lock Knob.....		1
2	TS-0680021	Flat Washer	1/4.....	22
3	JWBS18-403	Miter Gauge Body		1
4	JWBS20-156	Guide Disc		1
5	JWBS18-405	Pan Head Screw	M6x8	1
6	JWBS18-406	Pointer		1
7	JWBS18-407	Guide Bar		1
8	JWBS18X-408	Trunnion Support Bracket		1
9	TS-0051071	Hex Cap Bolt	5/16-18 x 1-1/2.....	3
10	TS-0720081	Lock Washer.....	5/16.....	8
11	TS-0270061	Set Screw	5/16-18 x 5/8.....	2
12	TS-0060111	Hex Cap Bolt	3/8-16 x 2-1/2.....	1
13	TS-0561031	Hex Nut.....	3/8-16.....	1
14	TS-0720091	Lock Washer.....	3/8.....	1
15	JWBS18-415	Lock Knob.....		2
16	JWBS18-416	Trunnion		2
17	JWBS18-417	Trunnion Clamp Shoe		2
18	TS-1491081	Hex Cap Bolt	M10 x 50	2
19	TS-1503041	Socket Head Cap Screw	M6x12	6
20	JWBS18-420	Scale.....		1
21	JWBS20-421	Table.....		1
22	JWBS18-422E	Front Rail		1
23	TS-0050021	Hex Cap Bolt	1/4-20 x 5/8.....	10
24	TS-0720071	Lock Washer.....	1/4.....	21
25	JWBS18-425E	Scale.....		1
26	JWBS20-426	Guide Rail		1
27	JWBS18-427E	Rear Rail.....		1
28	JWBS20-144	Table Insert.....		1
	JWBS20-144E	Narrow Table Insert.....		1
29	JWBS20-145	Roll Pin	3x10	1
30	JWBS18-430	Fence Body		1
31	JWBS18-431	Knob		1
32	JWBS18-432	Lock Handle.....		1
33	JWBS18-433	Lock Plate.....		1
34	JWBS18-434	Pad		5
35	JWBS18-435	Pin		1
36	JWBS18-436	Pin		1
37	JWBS20-437EA	Fence.....		1
38	TS-0208041	Socket Head Cap Screw	5/16-18x3/4.....	4
40	TS-0810012	Screw.....	#10-24x1/4	2
41	TS-0733031	Star Washer.....	#10	1
42	JWBS18-442	Pointer		1
43	TS-0561011	Hex Nut.....	1/4-20	7
44	JWBS18-444	Sliding Pad		1
45	JWBS18-445	Rear Hook		1
46	JWBS18-446	Pointer		1
47	JWBS18-447	Screw.....	M5x8	1

Index No.	Part No.	Description	Size	Qty
48.....	JWBS18DX-448	Table Pin		1
49.....	JWBS18-449E	Resaw Post		1
50.....	JWBS18-450	Lock Knob.....		1
51.....	JWBS18-451	JET Fence Label		1
52.....	JWBS18-452E	Lower Blade Guard		1
54.....	TS-0051091	Hex Cap Bolt	5/16-18x2	3
55.....	2013-285	End Cover.....		2
56.....	JWBS18DX-462E	Sucker (not shown)		1
57.....	JWBS20-455	Extension Table.....		1
58.....	JWBS18DX-458E	Lock Handle.....		1
59.....	TS-0680061	Flat Washer	1/2	2
60.....	40-0260	Wrench		1
61.....	JWBS18DX-459	C-Ring	S-10	2
62.....	JWBS18DX-460	Link Chain.....		1
63.....	TS-0151081	Carriage Bolt.....	1/4-20x5/8	4
	JWBS18-MGCP	Miter Gauge Assembly		
	JWBS20-FCPE	Fence Assembly Complete		
	JWBS20Q-APE	Accessory Package		

JWBS-20Q 708752BM

230/50/1

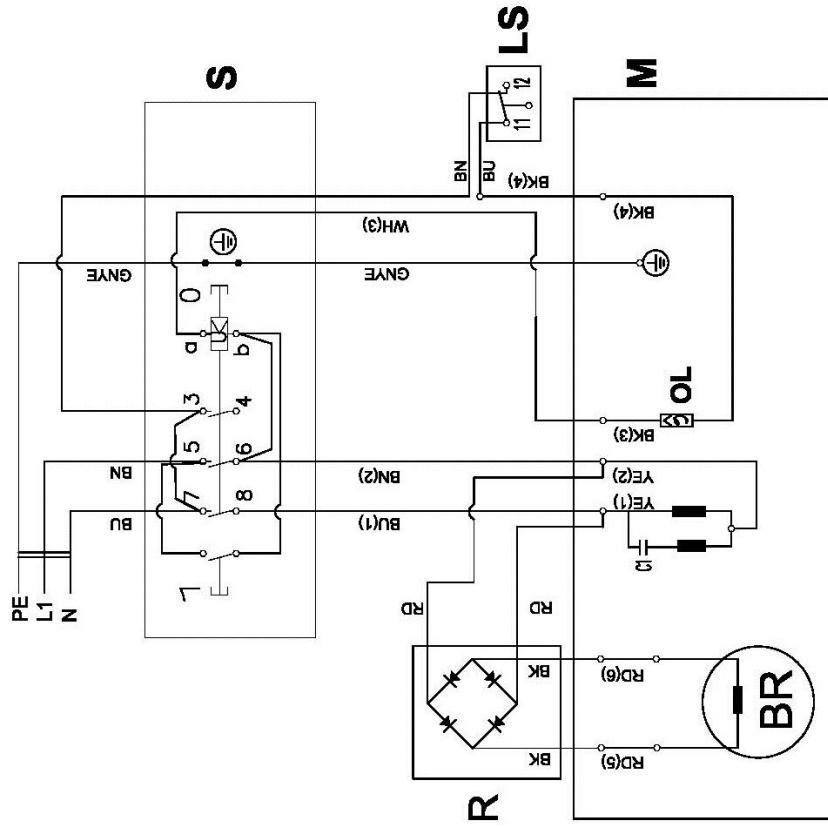

	colour of strands	Litzenfarben	couleur des cordons
BK	black	schwarz	noir
WH	white	weiß	blanc
BU	blue	blau	bleu
YE	yellow	gelb	jaune
RD	red	rot	rouge
BN	brown	braun	brun
GY	grey	grau	gris
GNYE	green-yellow	grün-gelb	vert-jaune
OG	orange	orange	orange
VT	violet	violett	violet

	meaning of symbol	Bedeutung der Zeichen	Interpretation
M	motor switch	Motor Schalter	moteur interrupteur
S	condenser	Kondensator	condensateur
C	rectifier	Gleichrichter	rectifier
R	motor break	Motorbremse	frein de moteur
BR	reversing switch	Drehrichtungsschalter	commu. droite/gauche
RS	centrifugal switch	Fliehkraftschalter	déclencheur centrifuge
CS	overload cut-off	Überlastschutzschalter	déclencheur surcharge
OL	limit switch	Positionsschalter	micro
LS			

JWBS-20Q
708752BT

400/50/3

	couleur des cordons	Litzenfarben	couleur des cordons
couleur of strands			
BK	black	schwarz	noir
WH	white	weiss	blanc
BU	blue	blau	bleu
YE	yellow	gelb	jaune
RD	red	rot	rouge
BN	brown	braun	brun
GY	grey	grau	gris
GNYE	green-yellow	grün-gelb	vert-jaune
OG	orange	orange	orange
VT	violet		violet

	meaning of symbol	Bedeutung der Zeichen	Interpretation
M	motor	Motor	moteur
S	switch	Schalter	interrupteur
C	condenser	Kondensator	condensateur
R	rectifier	Gleichrichter	rectifier
BR	motor break	Motorbremse	frein de moteur
RS	reversing switch	Drehrichtungsschalter	commu. droite/gauche
CS	centrifugal switch	Fliehkräftschalter	déclencheur centrifuge
OL	overload cut-off	Überlastschutzschalter	déclencheur surcharge
LS	limit switch	Positionsschalter	micro

