

J E T

MBS-910CS Metal Working Bandsaw

50000341T

400/50/1

**PARTS LIST
ERSATZTEILLISTE
LISTE DE PIÈCES**

WMH Tool Group AG

Bahnstrasse 24, CH – 8603 Schwerzenbach

www.wmhtoolgroup.ch; info@wmhtoolgroup.ch


Tel +41 (0) 44 806 47 48

Fax +41 (0) 44 806 47 58


P-50000341T 09/06




Breakdown for the MBS910CS Transmission Assembly

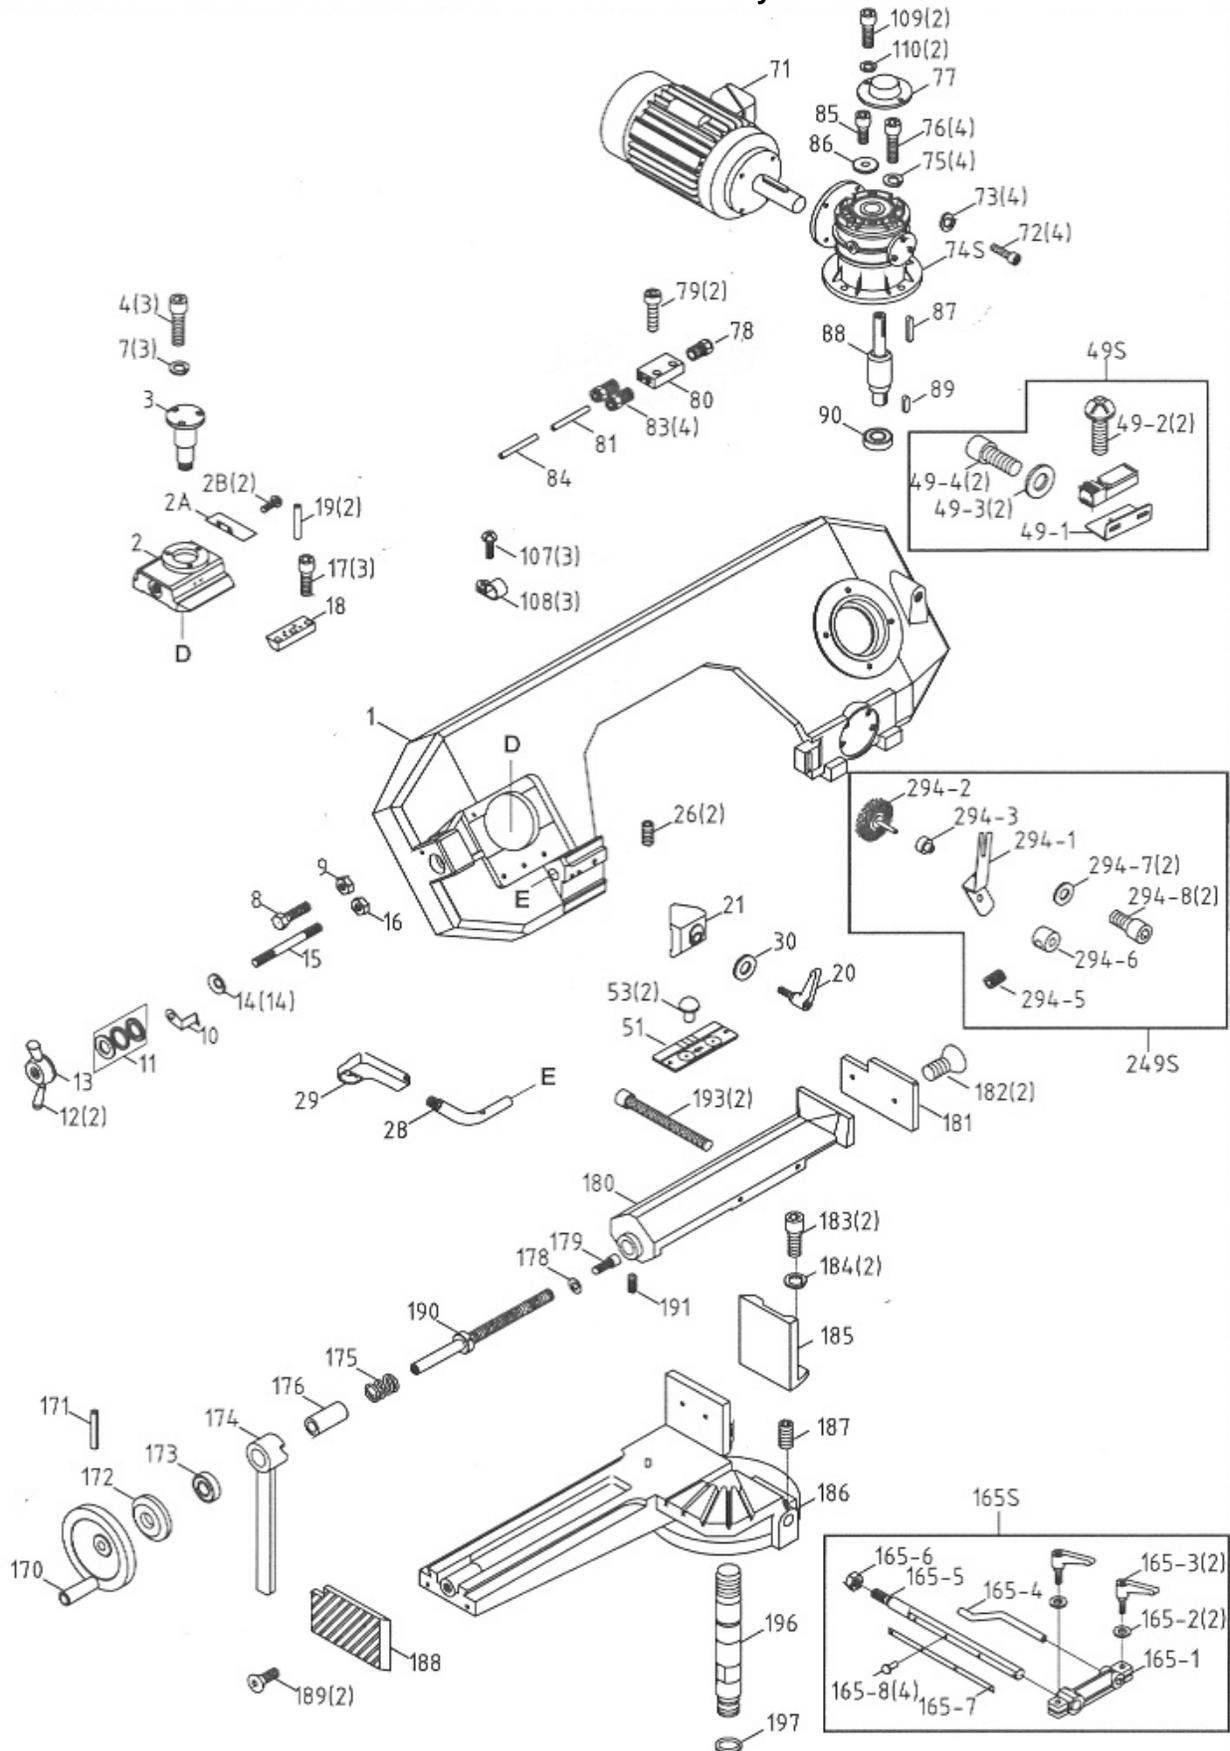

Breakdown for the MBS910CS Transmission Assembly

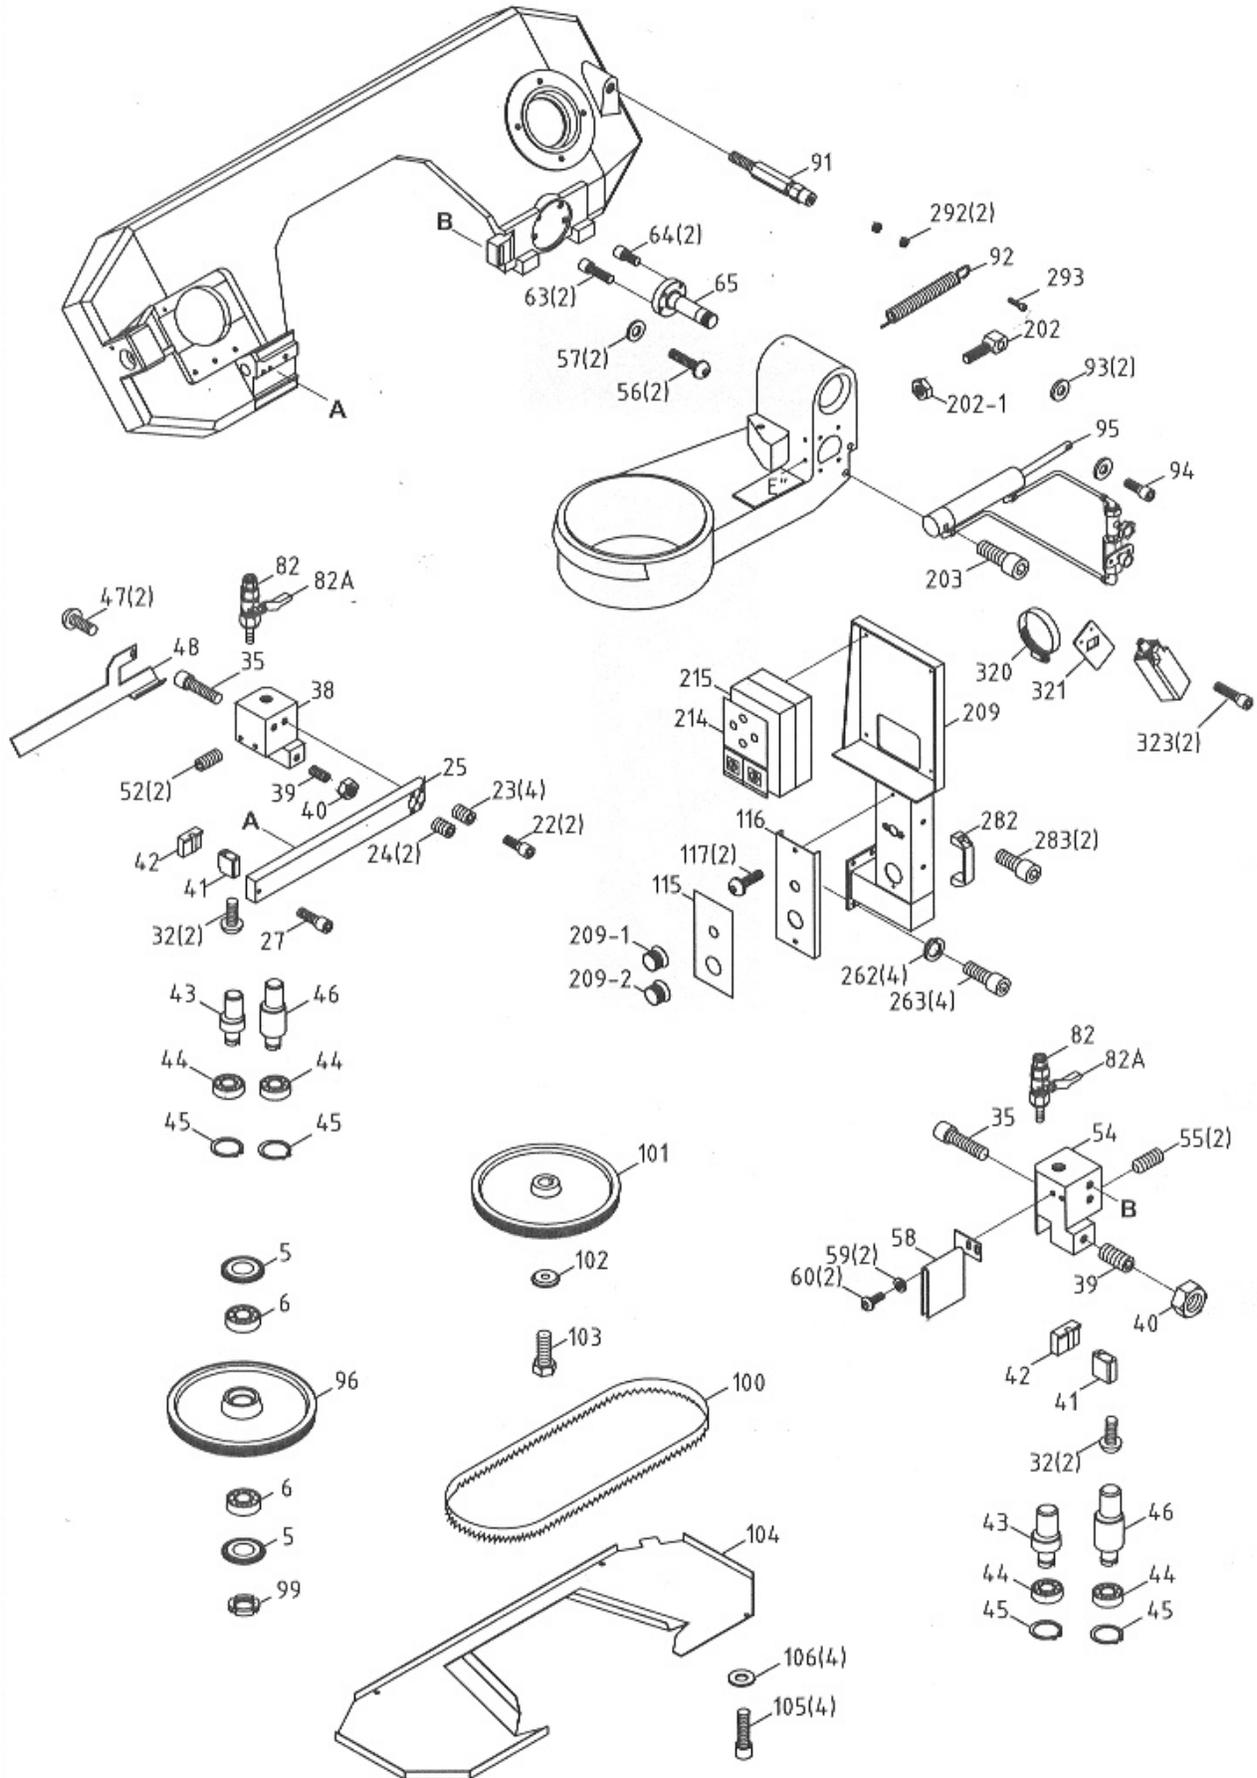

Breakdown for the MBS910CS Transmission Assembly

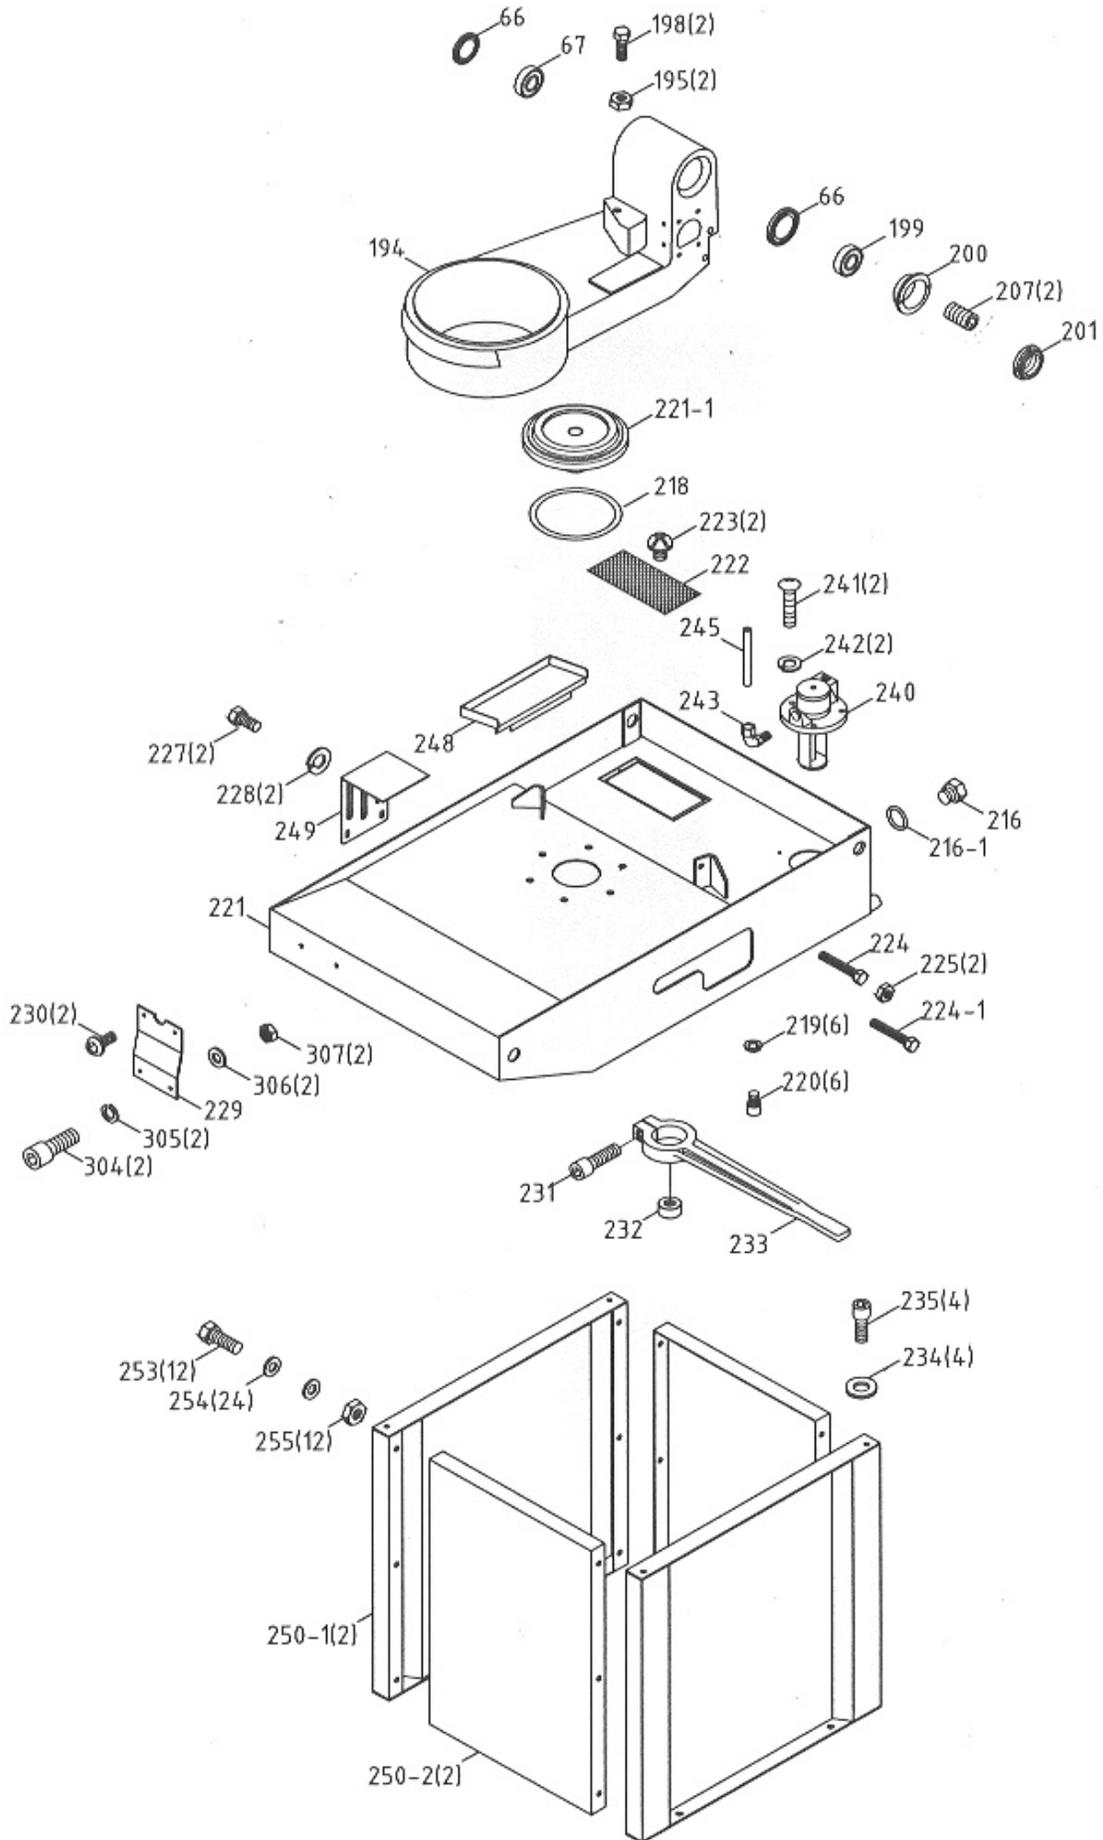

**Parts List for the MBS910CS
Transmission Assembly**

| Index No. | Part No. | Description | Size | Qty. |
|------------------|-----------------|----------------------------|--------------------|-------------|
| 1 | MBS910CS-01 | Body Frame | | 1 |
| 2 | MBS910CS-02 | Anchor Block | | 1 |
| 2A | MBS910CS-02A | Anchor Plate | | 1 |
| 2B | MBS708CS-02B | Round Head Screw | M5X10L | 2 |
| 3 | MBS910CS-03 | Shaft | | 1 |
| 4 | MBS910CS-04 | Hex. Socket Head Screw | M8X30L | 3 |
| 5 | MBS910CS-05 | Anti-Chip Cover | | 2 |
| 6 | MBS910CS-06 | Tapered Bearing | | 2 |
| 7 | MBS910CS-07 | Spring Washer | M8 | 3 |
| 8 | MBS708CS-08 | Hex. Head Screw | M8X45L | 1 |
| 9 | TS-1541031 | Hex. Nut | M8 | 1 |
| 10 | MBS708CS-10 | Indication Plate | | 1 |
| 11 | MBS708CS-11 | Bearing | | 1 |
| 12 | MBS708CS-12 | Knob | | 2 |
| 13 | MBS708CS-13 | Blade Tension Handle | | 1 |
| 14 | MBS708CS-14 | Spring Washer | øID16.3Xø31.5X1.8t | 14 |
| 15 | MBS910CS-15 | Lead screw | | 1 |
| 16 | MBS708CS-16 | Hex. Nut | M16XP2 | 1 |
| 17 | MBS910CS-17 | Hex. Socket Head Screw | M8X20L | 3 |
| 18 | MBS708CS-18 | Fixed Block | | 1 |
| 19 | MBS708CS-19 | Pin | ø 5X40 | 2 |
| 20 | MBS910CS-20 | Grip | | 1 |
| 21 | MBS910CS-21 | Fixed Block | | 1 |
| 22 | MBS910CS-22 | Hex. Socket Head Screw | M8X20L | 2 |
| 23 | MBS708CS-23 | Hex. Socket Headless Screw | M6X15L | 4 |
| 24 | MBS910CS-24 | Hex. Socket Headless Screw | M6X20L | 2 |
| 25 | MBS910CS-25 | Blade adjust stick | | 1 |
| 26 | MBS708CS-26 | Hex. Socket Headless Screw | M8X10L | 2 |
| 27 | MBS708CS-27 | Hex. Socket Head Screw | | 1 |
| 28 | MBS708CS-28 | Connecting Tube | | 1 |
| 29 | MBS708CS-29 | Handle | | 1 |
| 30 | TS-1550071 | Washer | M10 | 1 |
| 32 | MBS910CS-32 | Round Head Screw | M6X30L | 4 |
| 35 | MBS910CS-35 | Hex. Socket Head Screw | M6X8L | 2 |
| 38 | MBS910CS-38 | Blade Adjust | | 1 |
| 39 | MBS910CS-39 | Hex. Socket Headless Screw | M8X20L | 2 |
| 40 | MBS910CS-40 | Hex. Nut | M8XP1.25 | 2 |
| 41 | MBS910CS-41 | Guide | | 2 |
| 42 | MBS910CS-42 | Guide | | 2 |
| 43 | MBS910CS-43 | Eccentric Guide | | 2 |
| 44 | MBS910CS-44 | Bearing | | 4 |
| 45 | MBS708CS-45 | C-Retainer Ring | ø 8 | 4 |
| 46 | MBS910CS-46 | Eccentric Guide | | 2 |
| 47 | MBS910CS-47 | Round Head Screw | M6X15L | 2 |
| 48 | MBS910CS-48 | Blade Cover | | 1 |
| 49S | MBS708CS-49S | Power Cutting Bracket | | 1 |
| 49-1 | MBS708CS-49-1 | Power Cutting Bracket | | 1 |
| 49-2 | MBS708CS-49-2 | Cross Round Head Screw | M3x30L | 2 |
| 49-3 | TS-1550041 | Washer | M6 | 2 |
| 49-4 | MBS708CS-49-4 | Hex. Socket Head Screw | M6X12L | 2 |
| 51 | MBS910CS-51 | Scale | | 1 |
| 52 | MBS910CS-52 | Hex. Socket Headless Screw | M6X6L | 2 |

**Parts List for the MBS910CS
Transmission Assembly**

| Index No. | Part No. | Description | Size | Qty. |
|------------------|-----------------|----------------------------|------------------|-------------|
| 53 | MBS910CS-53 | Rivet | ø 2X6 | 2 |
| 54 | MBS910CS-54 | Blade Adjustable | | 1 |
| 55 | MBS910CS-55 | Hex. Socket Headless Screw | M6X6L | 2 |
| 56 | MBS910CS-56 | Hex. Socket Head Screw | M8X35L | 2 |
| 57 | TS-1550061 | Washer | M8 | 2 |
| 58 | MBS910CS-58 | Blade Cover | | 1 |
| 59 | TS-1550031 | Washer | M5 | 2 |
| 60 | MBS910CS-60 | Round Head Screw | M5X10L | 2 |
| 63 | MBS910CS-63 | Hex. Socket Head Screw | M10X40L | 2 |
| 64 | MBS910CS-64 | Hex. Socket Head Screw | M10X25L | 2 |
| 65 | MBS910CS-65 | Frame Pivot Shaft | | 1 |
| 66 | MBS910CS-66 | Anti-Chip Cover | | 2 |
| 67 | MBS910CS-67 | Tapered Bearing | | 1 |
| 71 | MBS910CS-71 | Motor | 1.5HP/400/50/3PH | 1 |
| 72 | MBS910CS-72 | Hex. Socket Head Screw | M6x25L | 4 |
| 73 | MBS708CS-73 | Spring Washer | M6 | 4 |
| 74S | MBS910CS-74S | Gear Box | | 1 |
| 75 | MBS910CS-75 | Spring Washer | M10 | 4 |
| 76 | MBS910CS-76 | Hex. Socket Head Screw | M10x20L | 4 |
| 77 | MBS910CS-77 | Reducer Cover | | 1 |
| 78 | MBS708CS-78 | Hose Fitting | ø 8X1/4"PT | 1 |
| 79 | MBS708CS-79 | Hex. Socket Head Screw | M6X15L | 2 |
| 80 | MBS708CS-80 | 3 Way Valve | | 1 |
| 81 | MBS708CS-81 | PU Tube | ø 6x240L | 1 |
| 82 | MBS708CS-82 | Valve | 1/8" | 2 |
| 82A | MBS708CS-82A | Handle | | 2 |
| 83 | MBS708CS-83 | Hose Fitting | ø 6X1/8"PT | 4 |
| 84 | MBS910CS-84 | PU Tube | ø 6x800L | 1 |
| 85 | MBS910CS-85 | Hex. Socket Head Screw | M10X30L | 1 |
| 86 | MBS708CS-86 | Prive Shaft Washer | | 1 |
| 87 | MBS708CS-87 | Round Head Key | 8X7X50 | 1 |
| 88 | MBS910CS-88 | Output Shaft | | 1 |
| 89 | MBS910CS-89 | Round Head Key | 8X7X25 | 1 |
| 90 | MBS910CS-90 | Bearing | | 1 |
| 91 | MBS910CS-91 | Spring Support | | 1 |
| 92 | MBS910CS-92 | Spring | | 1 |
| 93 | TS-1550071 | Washer | M10 | 2 |
| 94 | MBS910CS-94 | Hex. Socket Head Screw | M10X40L | 1 |
| 95 | MBS910CS-95 | Cylinder Assembly | | 1 |
| 96 | MBS910CS-96 | Idler Wheel | | 1 |
| 99 | MBS910CS-99 | Nut | | 1 |
| 100 | MBS910CS-100 | Blade | 0.9X27X2450X5/8T | 1 |
| 101 | MBS910CS-101 | Drive Wheel | | 1 |
| 102 | MBS708CS-102 | Drive Shaft Washer | | 1 |
| 103 | MBS910CS-103 | Hex. Head Screw | M12X30L | 1 |
| 104 | MBS910CS-104 | Blade Back Cover | | 1 |
| 105 | MBS708CS-105 | Hex. Socket Head Screw | M6X15L | 4 |
| 106 | TS-1550041 | Washer | M6 | 4 |
| 107 | MBS910CS-107 | Cross Round Head Screw | M5X20L | 3 |
| 108 | MBS910CS-108 | Hose Clip | ø 8 | 3 |
| 109 | MBS910CS-109 | Hex. Socket Head Screw | M8x15L | 2 |
| 110 | MBS910CS-110 | Spring Washer | M8 | 2 |
| 115 | MBS910CS-115 | Label | | 1 |


**Parts List for the MBS910CS
Transmission Assembly**

| Index No. | Part No. | Description | Size | Qty. |
|------------------|-----------------|-----------------------------|------------------|-------------|
| 116 | MBS910CS-116 | Cover | | 1 |
| 117 | MBS910CS-117 | Round Head Screw | M5x15L | 2 |
| 165S | MBS708CS-165S | Distance Set Rod Assembly | | 1 |
| 165-1 | MBS708CS-165-1 | Distance Set Bracket | | 1 |
| 165-2 | TS-1550051 | Washer | M8 | 2 |
| 165-3 | MBS708CS-165-3 | Knob | | 2 |
| 165-4 | MBS708CS-165-4 | Stock Stop Rod | | 1 |
| 165-5 | MBS708CS-165-5 | Distance Set Rod | | 1 |
| 165-6 | MBS708CS-165-6 | Hex. Nut | M14xP1.5 | 1 |
| 165-7 | MBS708CS-165-7 | Scale | | 1 |
| 165-8 | MBS708CS-165-8 | Rivet | ø 2 | 4 |
| 170 | MBS910CS-170 | Wheel | | 1 |
| 171 | MBS708CS-171 | Pin | ø 5X35 | 1 |
| 172 | MBS910CS-172 | Bearing Cover | | 1 |
| 173 | MBS708CS-173 | Bearing | ø 30X ø 47X3.5 | 1 |
| 174 | MBS708CS-174 | Vise Handle | | 1 |
| 175 | MBS708CS-175 | Spring | | 1 |
| 176 | MBS910CS-176 | Bushing | | 1 |
| 178 | MBS708CS-178 | Washer | ID ø 6.5 OD § 18 | 1 |
| 179 | MBS708CS-179 | Hex. Socket Head Screw | M6x15L | 1 |
| 180 | MBS910CS-180 | Vise Jaw Bracket | | 1 |
| 181 | MBS910CS-181 | Vise | | 1 |
| 182 | MBS708CS-182 | Hex. Socket Flat Head Screw | M6X12L | 2 |
| 183 | MBS910CS-183 | Hex. Socket Head Screw | M10X30L | 2 |
| 184 | MBS910CS-184 | Spring Washer | M10 | 2 |
| 185 | MBS910CS-185 | Vise | | 1 |
| 186 | MBS910CS-186 | Vise Jaw Bracket | | 1 |
| 187 | MBS910CS-187 | Hex. Socket Headless Screw | M8X10L | 1 |
| 188 | MBS910CS-188 | Vise | | 1 |
| 189 | MBS910CS-189 | Hex. Socket Head Screw | M6X15L | 2 |
| 190 | MBS910CS-190 | Lead screw A | | 1 |
| 191 | MBS708CS-191 | Hex. Socket Headless Screw | M8X20L | 1 |
| 193 | MBS910CS-193 | Hex. Socket Head Screw | M6X110L | 2 |
| 194 | MBS910CS-194 | Swivel Arm | | 1 |
| 195 | MBS708CS-195 | Hex. Nut | M10 | 2 |
| 196 | MBS910CS-196 | Vise Jaw Adjustable Rod | | 1 |
| 197 | MBS708CS-197 | O-Retainer Ring | § 19.8X § 2.4 | 1 |
| 198 | MBS708CS-198 | Hex. Head Screw | M10X45L | 2 |
| 199 | MBS910CS-199 | Bearing | | 1 |
| 200 | MBS910CS-200 | Bushing | | 1 |
| 201 | MBS910CS-201 | Nut | | 1 |
| 202 | MBS708CS-202 | Bolt | | 1 |
| 202-1 | MBS708CS-202-1 | Hex. Nut | M10-P1.5 | 1 |
| 203 | MBS910CS-203 | Hex. Socket Head Screw | M10X115L | 1 |
| 207 | MBS910CS-207 | Hex. Socket Headless Screw | | 2 |
| 209 | MBS910CS-209 | Control Box Base | | 1 |
| 209-1 | MBS910CS-209-1 | Value | | 1 |
| 209-2 | MBS910CS-209-2 | Throttle Valve | | 1 |
| 214 | MBS910CS-214 | Lable for Name Plate | | 1 |
| 215 | MBS910CS-215 | Control Switch Assembly | | 1 |
| 216 | MBS708CS-216 | Hex Socket Plug | 3/8"PT | 1 |
| 216-1 | MBS708CS-216-1 | O-Retainer Ring | P14 | 1 |
| 218 | MBS910CS-218 | O-Retainer Ring | ID195X5.7W | 1 |

**Parts List for the MBS910CS
Transmission Assembly**

| Index No. | Part No. | Description | Size | Qty. |
|------------------|-----------------|----------------------------|-----------------|-------------|
| 219 | MBS708CS-219 | Spring Washer | M10 | 6 |
| 220 | MBS910CS-220 | Hex. Socket Head Screw | M10X20L | 6 |
| 221 | MBS910CS-221 | Stand | | 1 |
| 221-1 | MBS910CS-221-1 | Swivel Arm Base | | 1 |
| 222 | MBS708CS-222 | Filter | | 1 |
| 223 | MBS708CS-223 | Cross Round Head Screw | M4X8L | 2 |
| 224 | MBS708CS-224 | Hex. Head Screw | M10X50L | 1 |
| 224-1 | MBS708CS-224-1 | Hex. Head Screw | M10X100L | 1 |
| 225 | MBS910CS-225 | Hex. Nut | M12XP1.75 | 2 |
| 227 | MBS708CS-227 | Hex. Head Screw | M10X25L | 2 |
| 228 | MBS708CS-228 | Spring Washer | M10 | 2 |
| 229 | MBS910CS-229 | Fixed Plate | | 1 |
| 230 | MBS708CS-230 | Round Head Screw | M6X10L | 2 |
| 231 | MBS708CS-231 | Hex. Socket Head Screw | M10X35L | 1 |
| 232 | MBS708CS-232 | Nut | | 1 |
| 233 | MBS910CS-233 | Adjustable Handle | | 1 |
| 234 | TS-1550051 | Washer | M8 | 4 |
| 235 | MBS910CS-235 | Hex. Socket Head Screw | M8x25L | 4 |
| 240 | MBS708CS-240 | Coolant Pump | 1/8HP/400V/50HZ | 1 |
| 241 | MBS708CS-241 | Cross Round Head Screw | M6X15L | 2 |
| 242 | MBS708CS-242 | Spring Washer | M6 | 2 |
| 243 | MBS708CS-243 | Micro Control Block | 3/8"x3/8" | 1 |
| 245 | MBS708CS-245 | PU Tube | § 8x1300L | 1 |
| 248 | MBS708CS-248 | Fluid Collected Plate | | 1 |
| 249 | MBS910CS-249 | Feed Support | | 1 |
| 250 | MBS910CS-250 | Stand Leg Set | | 1 |
| 250-1 | MBS910CS-250-1 | Stand Leg | | 2 |
| 250-2 | MBS910CS-250-2 | Stand Leg | | 2 |
| 253 | TS-1490031 | Hex. Head Screw | M8x20L | 12 |
| 254 | TS-1550051 | Washer | M8 | 24 |
| 255 | TS-1541031 | Hex. Nut | M8 | 12 |
| 262 | MBS910CS-562 | Spring Washer | M6 | 4 |
| 263 | MBS910CS-263 | Hex. Socket Head Screw | M6x15L | 4 |
| 282 | MBS708CS-282 | Knob | | 1 |
| 283 | MBS708CS-283 | Hex. Socket Head Screw | M8X15L | 2 |
| 292 | TS-1541041 | Hex. Nut | M10 | 2 |
| 293 | MBS708CS-283 | Hex. Socket Head Screw | M10X40L | 1 |
| 294S | MBS910CS-294S | Brush Assembly | | 1 |
| 294-1 | MBS910CS-294-1 | Brush Support | | 1 |
| 294-2 | MBS910CS-294-2 | Brush | | 1 |
| 294-3 | MBS910CS-294-3 | Bushing | | 1 |
| 294-5 | MBS910CS-294-5 | Hex. Socket Headless Screw | M6X10L | 1 |
| 294-6 | MBS910CS-294-6 | Bushing | | 1 |
| 294-7 | TS-1550041 | Washer | M6 | 2 |
| 294-8 | MBS910CS-294-8 | Hex. Socket Head Screw | M6x10L | 2 |
| 304 | MBS708CS-304 | Hex. Socket Head Screw | M6x15L | 2 |
| 305 | MBS708CS-305 | Spring Washer | M6 | 2 |
| 306 | TS-1550041 | Washer | M6 | 2 |
| 307 | TS-1541021 | Hex. Nut | M6 | 2 |
| 320 | MBS910CS-320 | Hose Clip | | 1 |
| 321 | MBS910CS-321 | Down Bracket | | 1 |
| 323 | MBS910CS-323 | Hex. Socket Head Screw | M4X30L | 2 |

Breakdown for the MBS910CS Electrical Box Assembly

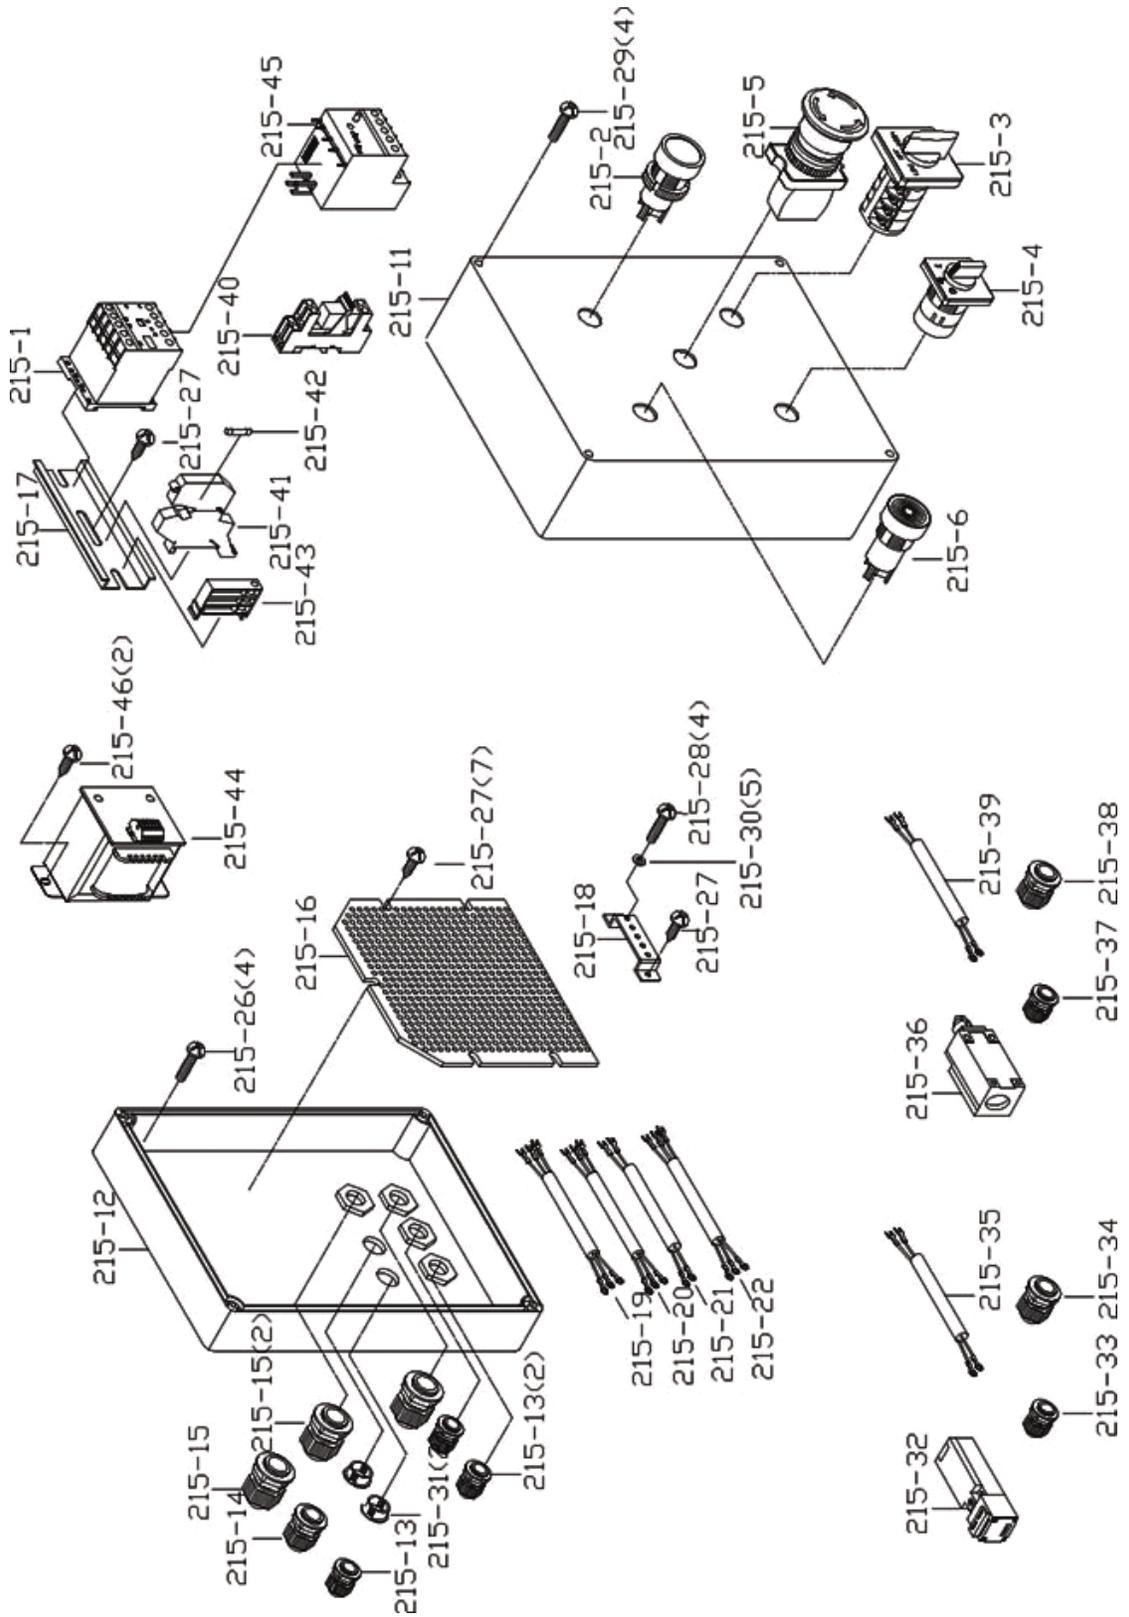

**Parts List for the MBS910CS
Electrical Box Assembly**

| Index No. | Part No. | Description | Size | Qty. |
|------------------|-----------------|------------------------|-------------|-------------|
| 215 | MBS708CS-215 | Control Box | | 1 |
| 215-1 | MBS708CS-215-1 | Magnetic-Contact | | 1 |
| 215-2 | MBS708CS-215-2 | Push-Button Switch | | 1 |
| 215-3 | MBS708CS-215-3 | Choice Pole Switch | | 1 |
| 215-4 | MBS708CS-215-4 | Choice-Switch | | 1 |
| 215-5 | MBS708CS-215-5 | Emergency-Stop Switch | | 1 |
| 215-6 | MBS708CS-215-6 | Lamp | | 1 |
| 215-11 | MBS708CS-215-11 | Box Upper Lib | | 1 |
| 215-12 | MBS910CS-215-12 | Box Seat | 910CS only | 1 |
| 215-13 | MBS708CS-215-13 | Cable-Gland | | 3 |
| 215-14 | MBS708CS-215-14 | Cable-Gland | | 1 |
| 215-15 | MBS708CS-215-15 | Cable-Gland | | 3 |
| 215-16 | MBS708CS-215-16 | Net-Pin | | 1 |
| 215-17 | MBS708CS-215-17 | Din-Rails | | 1 |
| 215-18 | MBS708CS-215-18 | Grand Copper Pin | | 1 |
| 215-19 | MBS708CS-215-19 | Power Cable | | 1 |
| 215-20 | MBS708CS-215-20 | Motor Cable | | 1 |
| 215-21 | MBS708CS-215-21 | Limit Cable | | 1 |
| 215-22 | MBS708CS-215-22 | Pump Cable | | 1 |
| 215-23 | MBS708CS-215-23 | Wire | | 1 |
| 215-24 | MBS708CS-215-24 | Wire | | 1 |
| 215-25 | MBS708CS-215-25 | Wire | | 1 |
| 215-26 | MBS708CS-215-26 | Cross Round Head Screw | M5x8 | 4 |
| 215-27 | MBS708CS-215-27 | Screw | M4 x 8 | 11 |
| 215-28 | MBS708CS-215-28 | Screw | M4x6 | 4 |
| 215-29 | MBS708CS-215-29 | Cross Round Head Screw | M4x15 | 4 |
| 215-30 | MBS708CS-215-30 | Washer | M5 | 5 |
| 215-31 | MBS708CS-215-31 | Hole Plug | | 2 |
| 215-32 | MBS708CS-215-32 | Limit-Switch | | 1 |
| 215-33 | MBS708CS-215-33 | Cable-Gland | | 1 |
| 215-34 | MBS708CS-215-34 | Cable-Gland | | 1 |
| 215-35 | MBS708CS-215-35 | Limit Cable | | 1 |
| 215-36 | MBS708CS-215-36 | Limit-Switch | | 1 |
| 215-37 | MBS708CS-215-37 | Cable-Gland | | 1 |
| 215-38 | MBS708CS-215-38 | Cable-Gland | | 1 |
| 215-39 | MBS708CS-215-39 | Limit Cable | | 1 |
| 215-40 | MBS708CS-215-40 | Relay | 24V | 1 |
| 215-41 | MBS708CS-215-41 | Fuse Seat | | 1 |
| 215-42 | MBS708CS-215-42 | Fuse | 2A | 1 |
| 215-43 | MBS708CS-215-43 | Fix Block | | 1 |
| 215-44 | MBS708CS-215-44 | Transformer | | 1 |
| 215-45 | MBS910CS-215-45 | Overload Protector | 2.6A-3.7A | 1 |
| 215-46 | MBS708CS-215-46 | Screw | | 2 |

MBS910CS 50000341T

400/50/1

| | colour of strands | Litzenfarben | couleur des cordons |
|------|-------------------|--------------|---------------------|
| BK | black | schwarz | noir |
| WH | white | weiß | blanc |
| BU | blue | blau | bleu |
| RD | red | rot | rouge |
| BN | brown | braun | brun |
| GNYE | green-yellow | grün-gelb | vert-jaune |
| GN | green | grün | vert |

| | meaning of symbol | Bedeutung der Zeichen | interprétation |
|-----|-----------------------|-----------------------|--------------------|
| KM | Magnetic contactor | Hauptschütz | contacteur |
| FU | fuse | Sicherung | fusible |
| L | lamp | Anzeigenlampe | lampe d'indication |
| SE | emergency stop switch | Not-Aus Schalter | arrêt d'urgence |
| SB1 | start button | Ein-Schalter | bouton marche |
| SC1 | choice speed switch | Aus-Schalter | bouton arrêt |
| SC2 | pump switch | Kühlmittel-Schalter | bouton pompe |
| SQ1 | downer limit switch | Positionsendschalter | micro |
| M | main motor | Hauptmotor | moteur principal |
| P | pump | Kühlmittelmotor | moteur pompe |
| SQA | saw lid limit switch | Positionsendschalter | micro |
| SQB | tension limit switch | Positionsendschalter | micro |

