



JWBS-18

**Woodworking Bandsaw
Holz-Bandsäge
Scie à ruban
Ленточнопильный станок**

**JWBS-18-M.....714700M....1~230V, 50Hz
JWBS-18-T.....714750T 3~400V, 50Hz**


PARTS LIST


JPW (Tool) AG
Ackerstrasse 45,
CH-8610 Uster
Switzerland



www.jettools.com

JWBS-18 CE Band saw Assembly – Exploded View

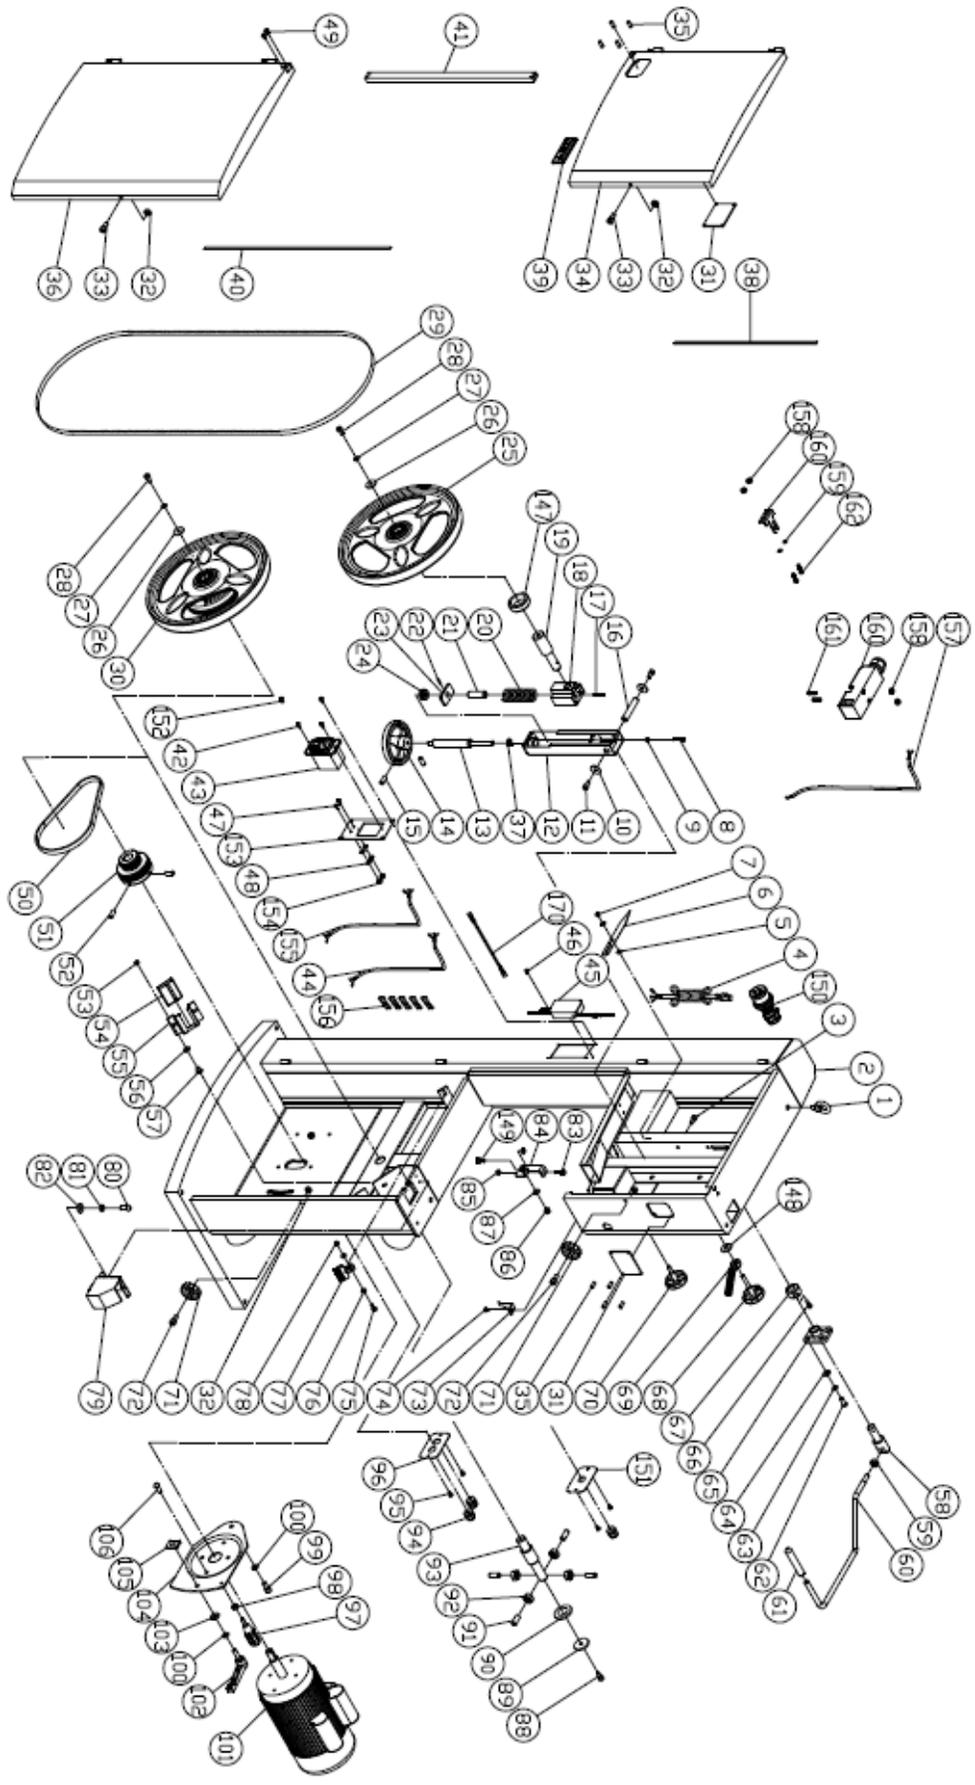

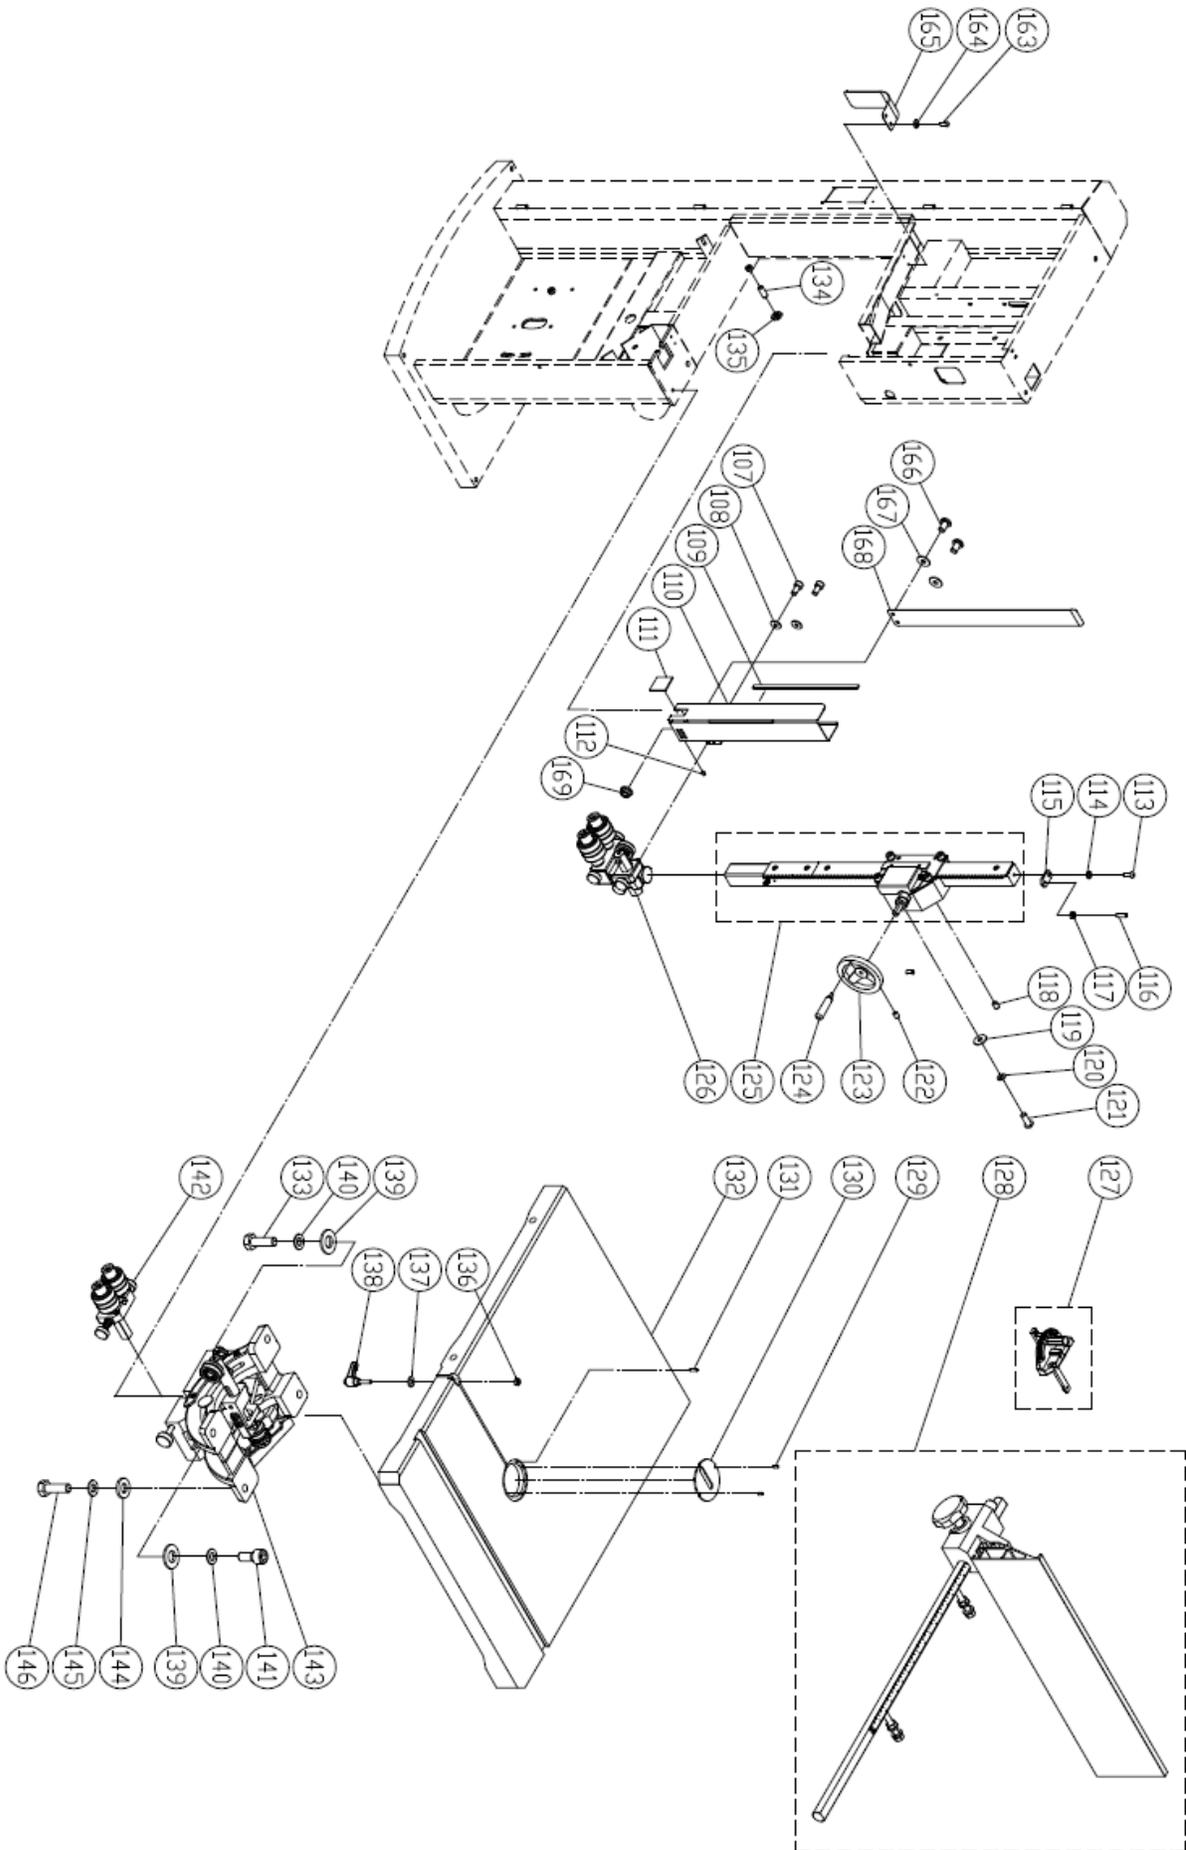

JWBS-18 CE Band saw Assembly – Parts List


Index No.	Part No.	Description	Size	Qty
1	PM1500-004	Lifting Ring	M10	1
2	JWBS18BM-102	Machine Main Body Frame		1
3	TS-1482021	Hex Cap Bolt	M6x12	1
4	JWBS15M-104	CE Power Cord (1PH)	1.5mm ² x3Cx3.3M	1
	JWBS15M-104-AU	CE Power Cord (1PH) with SAA 10A Plug	1.0mm ² x3Cx3.3M	1
	JWBS15T-104	CE Power Cord (3PH)	1.0mm ² x4Cx3.3M	1
5	TS-1550041	Flat Washer	M6	2
6	JWBS18B-106	Tension Pointer		1
7	PM1500-012	Step Screw		1
8	TS-1503111	Socket Head Cap Screw	M6x50	1
9	TS-2311061	Hex Nut	M6	1
10	TS-1550061	Flat Washer	M8	2
11	TS-1504031	Socket Head Cap Screw	M8x16	2
12	JWBS15-112	Upper Wheel Sliding Bracket		1
13	JWBS18B-113	Adjusting Bolt		1
14	JWBS15-114	Handwheel	6"	1
15	TS-1523041	Set Screw	M6x12	2
16	JWBS15-116	Upper Shaft		1
17	JWBS15-117	Spring Pin	Ø5x36mm	1
18	JWBS15-118	Upper Wheel Sliding Bracket		1
19	JWBS18B-119	Upper Wheel Shaft		1
20	JWBS15-120	Spring		1
21	PM1500-010-02	Bushing		1
22	JWBS15-122	Pin	Ø 3x20mm	1
23	JWBS15-123	Locate Block		1
24	BB-51201	Bearing	51201	1
25	PM1800B-018	Upper Wheel Assembly	Ø18"	1
26	PM1800B-017	Washer		2
27	TS-2361081	Spring Washer	M8	2
28	TS-1504041	Socket Head Cap Bolt	M8x20	2
29	JWBS18B-129	Saw Blade	150"L x 3/4" x 0.026" T x 6 TPI	1
30	JWBS18B-130	Lower Wheel Assembly	Ø18"	1
31	PM1500-050	Viewing Window		2
32	TS-1541021	Nylon Nut	M6	4
33	TS-1503021	Socket Head Cap Screw	M6x10	2
34	JWBS18BM-134	Upper Cabinet Door		1
35	JWBS15-135	Socket Head Cap Screw	M4x8	8
36	JWBS18BM-136	Lower Cabinet Door		1
37	PM1800B-027-026	Retaining Ring (E)	E15	1
38	JWBS15-138	Sponge	585x10mm T=1	1
39	JET-138-R2000	Jet Logo	138x57mmx R2000	1
40	JWBS15-140	Sponge	760x10mm T=1	1
41	JWBS18BM-141	Cabinet Door Connection Tube		1
42	SF-050200	Pan Head Bolt w/Flange	M5x10	2
43	JWBS-15M-143	CE on/off Switch (KJD-11)	230V, 1PH	1
	JWBS-15T-143	CE on/off Switch (KJD-11)	400V, 3PH	1
44	JWBS15M-144	CE Motor Cord	1.5mm ² x3Cx1.6M	1
	JWBS15T-144	CE Motor Cord	1.0mm ² x4Cx1.6M	1
45	136374	Regulator IC Board	DC-90V	1
46	ST039200	Tapping Screw	M3.5x8	1
47	TS-1533032	Pan Head Screw	M5x10	2
48	TS-0733041	Ext. Tooth Lock Washer	M5	4
49	TS-2245102	Socket Head Button Screw	M5x10	4
50	JWBS18B-150	Poly-V Belt	430J10	1
51	JWBS18B-151	Motor Pulley		1
52	TS-1523041	Set Screw	M6x12	2
53	TS-2311061	Hex Nut	M6	2

Index No.	Part No.	Description	Size	Qty
54	JWBS18DX-249	Dust Collect Insert		1
55	JWBS15-155	Fixed Plate		1
56	TS-2361061	Spring Washer	M6	2
57	TS-2246122	Socket Head Button Screw	M6x12	2
58	PM1500-074	Tension Quick Release Lever Shaft		1
59	TS-1540083	Hex Nut	M12	1
60	JWBS18B-160	Tension Quick Release Lever		1
61	JWBS15-161	Grip		1
62	TS-2248202	Socket Head Button Screw	M8x20	4
63	TS-2361081	Spring Washer	M8	4
64	TS-1550061	Flat Washer	M8xØ18	4
65	PM1500-070	Shaft Fixed Block		1
66	TS-1503061	Socket Head Cap Screw	M6x25	1
67	PM1500-069	Cam		1
68	JWBS15-168	Lock Knob	M10x53	1
69	PM1500-068	Lock Handle	M10	1
70	JWBS15-170	Lock Knob	M10x25	1
71	135041	Knob		2
72	TS-1503051	Socket Head Cap Screw	M6x20	2
73	JWBS15-173	Pointer		1
74	6286494	Pan Head Screw	M5x6	1
75	TS-1482051	Hex Cap Screw	M6x25	1
76	TS-1550041	Flat Washer	M6	2
77	PM1500-058	Brush		1
78	TS-1541021	Hex Nylon Lock Nut	M6	1
79	JWBS18B-179	Lower Blade Guard		1
80	TS-2246082	Socket Head Button Screw	M6x8	2
81	TS-2361061	Lock Washer	M6	2
82	TS-1550041	Flat Washer	M6	2
83	TS-1490061	Hex Cap Screw	M8x35	1
84	JWBS15-184	Support Plate		1
85	TS-1541031	Hex Nut	M8	1
86	TS-1541031	Nylon Nut	M8	1
87	TS-1550061	Flat Washer	M8	2
88	TS-1504041	Socket Head Cap Screw	M8x20	1
89	PM1800B-088	Washer		1
90	PM1800B-087	Plate		1
91	TS-2279301	Set Screw	M10x30	4
92	TS-1541041	Hex Nut	M10	4
93	PM1800B-084	Lower Wheel Shaft		1
94	PM1500-062	Strain Relief	PG13.5	2
95	PM1500-039	Tapping Screw	M4x8	2
96	PM1500-083	Strain Relief Fixed Plate		1
97	JWBS15-197	Handle		1
98	TS-1540061	Hex Nut	M8	1
99	TS-149105	Hex Cap Screw	M10x35	1
100	TS-2361101	Spring Washer	M10	2
101	JWBS18B-1101E	Motor	1.5kW / 230V/ 1PH	1
	JWBS18B-1101ERC	Running Capacitor (not shown)	50µF, 350VAC	1
	JWBS20B-188EBR	Motor Brake Assembly (not shown)		1
	JWBS18B-1101EFC	Motor Fan Cover (not shown)		1
	JWBS18B-1101AE	Motor	2.25kW / 400V/ 3PH	1
	JWBS20B-188EBR	Motor Brake Assembly (not shown)		1
	JWBS18B-1101AEFC	Motor Fan Cover (not shown)		1
102	PM1500-015	Motor Bracket Lock Handle	M10x33	1
103	TS-1550071	Flat Washer	M10	1
104	JWBS15-1104	Motor Bracket		1
105	PM1500-038	Locating Block		1
106	TS-2248202	Socket Head Button Screw	M8x20	4

Index No.	Part No.	Description	Size	Qty
107	TS-1482031	Hex Cap Screw	M6x16	2
108	TS-1550071	Flat Washer	M6	2
109	JWBS15-1109	Magnet Strip	7x340mm	1
110	JWBS18BM-1110	Blade Guard Cover		1
111	PM1800B-093	Viewing Window		1
112	TS-1521011	Set Screw	M4x4	2
113	TS-2246122	Socket Head Button Screw	M6x12	1
114	TS-2361061	Spring Washer	M6	1
115	PM1800B-163	Locate Plate		1
116	F010432	Set Screw	M6x35	1
117	TS-1540041	Hex Nut	M6	1
118	5302731	Set Screw	M8x6	4
119	TS-1550061	Flat Washer	M8	4
120	TS-2361081	Spring Washer	M8	4
121	TS-2248202	Socket Head Button Screw	M8x20	4
122	TS-1523041	Set Screw	M6x12	2
123	JWBS15-1118	Handwheel	5"	1
124	JWBS15-1119	Handle	M8	1
125	JWBS18B-1125	Guide Bar Bracket Assembly		1
126	JWBS18B-1126	Upper Blade Guide Assembly		1
127	JWBS15-1122	Miter Gauge Assembly		1
128	JWBS18B-1128	Rip Fence Assembly		1
129	F012085	Roll Pin	Ø4x8 mm	2
130	JWBS15-1125	Table Insert		1
131	TS-1522011	Set Screw	M5x5	3
132	JWBS18B-1132	Table		1
133	TS-149105	Hex Cap Screw	M10x35	1
134	7015-48	Set Screw	M8x30	1
135	TS-1540061	Hex Nut	M8	1
136	TS-1540061	Hex Nut	M8	1
137	TS-1550061	Flat Washer	M8	1
138	JWBS18B-1138	Handle	M8x35	1
139	TS-1550071	Flat Washer	M10	2
140	TS-2361101	Spring Washer	M10	2
141	TS-1505051	Socket Head Cap Screw	M10x35	1
142	JWBS18B-1142	Lower Blade Guide Assembly		1
143	JWBS15-1138	Trunnion Support Bracket Assembly		1
144	TS-1550061	Flat Washer	M8	4
145	TS-2361081	Spring Washer	M8	4
146	TS-1490041	Hex Cap Screw	M8x25	4
147	JWBS18B-1147	Bushing		1
148	TS-1550071	Flat Washer	M10xØ23	1
149	TS-1490021	Hex. Head Bolt	M8x16	1
150	IC290006	CE 3Phase Plug	P-551	1
151	JWBS15-196A	Strain Relief Fixed Plate		1
152	TS-2246102	Socket Head Button Screw	M6x10	4
153	JWBS-15M-1148	Switch Plate		1
154	TS-1540031	Nut	M5	2
155	JWBS-15M-1150	Temperature & Brake Cord (1PH)	0.75mm ² x5Cx1.6M	1
	JWBS-15T-1150	Temperature & Brake Cord (3PH)	0.75mm ² x7Cx1.6M	1
156	JWBS-15M-1151	Wire Connector	224-201	9
157	IC135506	Switch Cord	0.75mm ² x2Cx1.8M	1
158	NF040700	Hex. Nut w/Flange	M4	4
159	TS-1550021	Flat Washer	M4xØ8	2
160	130266	Door Latch Switch	AZD-S11	1
161	SP040610	Pan Head Bolt	M4x30	2
162	SP040200	Pan Head Bolt	M4x10	2
163	TS-2246102	Socket Head Button Screw	M6x10	2
164	TS-1550041	Flat Washer	M6xØ16	2

Index No.	Part No.	Description	Size	Qty
165	135379	Leaf Spring		1
166	TS-2248122	Socket Head Button Screw	M8x12	2
167	TS-1550061	Flat Washer	M8xØ18	2
168	135596	Cover Spring		1
169	NF081300	Hex. Nut w/Flange	M8	2
170	IC130366	Connect Cord (1PH)	1015x1Cx150mm	1


JWBS-15/18/20 Trunnion Support Bracket Assembly – Exploded View

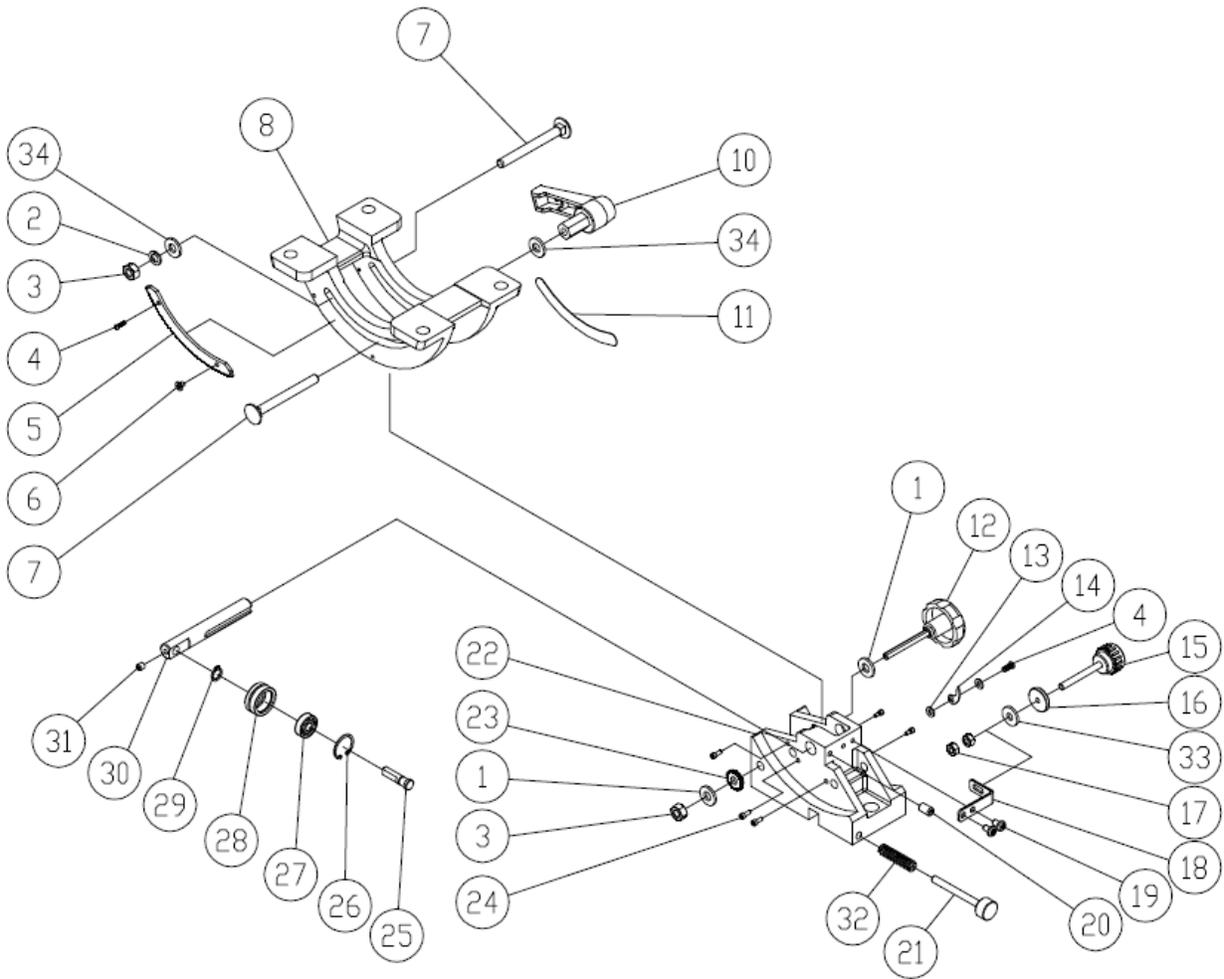

JWBS-15/18/20 Trunnion Support Bracket Assembly – Parts List

Index No	Part No	Description	Size	Qty
	JWBS15-1138A	Trunnion Support Bracket Assembly (#1 thru 34)		
1	TS-1550061	Flat Washer	M8 x Ø18	4
2	TS-2361081	Lock Washer	M8	1
3	TS-1541031	Nylon Lock Hex Nut	M8	2
4	TS-2171012	Phillips Pan Head Machine Screw	M4x6	2
5	PM1500-085-05	Gear Rack		1
6	TS-2284061	Phillips Flat Head Machine Screw	M4x6	1
7	JWBS15-1138-307	Carriage Bolt	M8x90	2
8	PM1500-085-08	Trunnion Block		1
10	JWBS15-1138-310	Lock Handle		1
11	PM1500-085-11	Tilt Scale		1
12	PM1500-085-12	Adjustment Knob Bolt		1
13	TS-1550021	Flat Washer	M4 x Ø8	2
14	PM1500-085-14	Angle Pointer		1
15	JWBS15-1138-315	Adjustment Knob Bolt	M6	1
16	PM1500-085-16	Locking Ring		1
17	TS-2311061	Hex Nut	M6	2
18	PM1500-085-18	Adjustment Plate		1
19	5712561	Phillips Pan Head Machine Screw	M5x8	2
20	PM1500-085-20	Set Screw		1
21	PM1500-085-21	Lock Knob		1
22	JWBS15-1138-322	Trunnion Support Bracket		1
23	PM1500-085-23	Gear		1
24	TS-2235061	Socket Head Cap Screw	M5x6	6
25	PM1500-085-25	Adjustment Shaft		1
26	PM1500-085-26	Retaining Ring	R22	1
27	BB-608ZZ	Ball Bearing	608ZZ	1
28	PM1500-085-28	Thrust Bearing Holder		1
29	PM1500-085-29	Retaining Ring	S8	1
30	JWBS15-1138-330	Adjustment Bar		1
31	TS-1523011	Socket Set Screw	M6x6	1
32	JWBS15-1138-332	Spring		1
33	TS-1550041	Flat Washer	M6 x Ø19	1
34	JWBS15-1138-334	Flat Washer	M8 x Ø23x5t	2


JWBS-18/20 Guide Bar Bracket Assembly – Exploded View

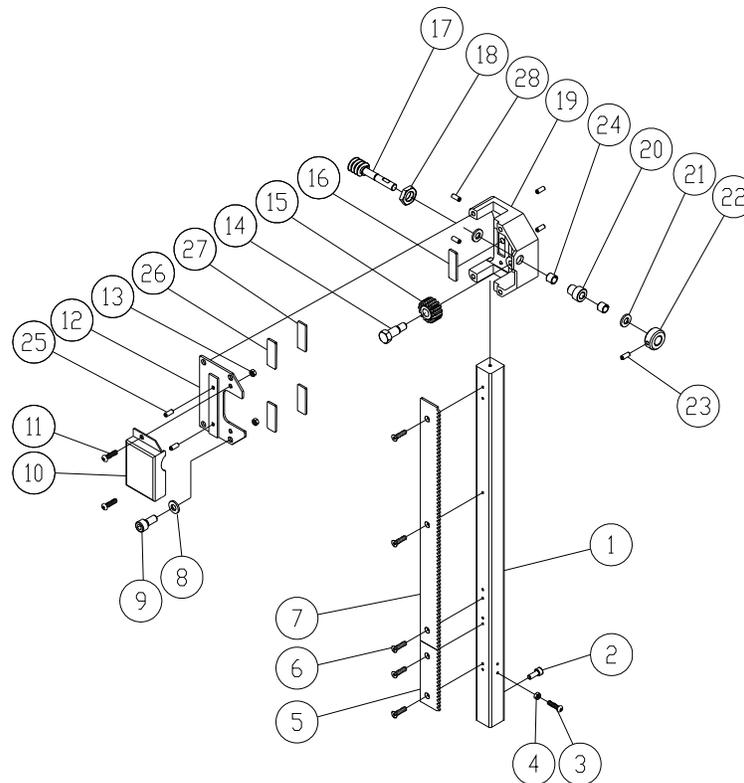

JWBS-18/20 Guide Bar Bracket Assembly – Parts List

Index No	Part No	Description	Size	Qty
.....	JWBS18B-1125.....	Guide Bar Bracket Assembly (#1 thru 28).....		
1.....	JWBS18B-1125-401	Guide Bar.....		1
2.....	TS-1503021.....	Socket Head Cap Screw.....	M6x10.....	2
3.....	TS-1532032.....	Pan Head Screw.....	M4x10.....	1
4.....	TS-1540021.....	Nut.....	M4.....	1
5.....	PM1500-091-08.....	Guide Bar Rack (Short).....		1
6.....	TS-2284081.....	Phillips Flat Head Machine Screw.....	M4x8.....	5
7.....	PM1500-091-20.....	Guide Bar Rack (Long).....		1
8.....	TS-2361081.....	Spring Washer.....	M8.....	4
9.....	TS-1504031.....	Socket Head Cap Screw.....	M8x16.....	4
10.....	PM1500-091-04.....	Cover.....		1
11.....	TS-1534041.....	Pan Head Screw.....	M5x10.....	2
12.....	JWBS18B-1125-412	Cover.....		1
13.....	TS-1540031.....	Hex Nut.....	M5.....	2
14.....	PM1500-091-10.....	Fixed Screw.....		1
15.....	PM1500-091-11.....	Gear.....		1
16.....	PM1500-091-12.....	Fixed Plate.....		1
17.....	PM1500-091-13.....	Worm Shaft.....		1
18.....	JWBS15-1120-418.....	Nut.....		1
19.....	PM1500-091-15.....	Guide Bracket.....		1
20.....	PM1500-091-18.....	Bushing.....		1
21.....	PM1500-091-25.....	Fiber Washer.....		2
22.....	PM1500-091-19.....	Collar.....		1
23.....	TS-1522011.....	Set Screw.....	M5x5.....	2
24.....	JWBS15-1120-424.....	Bushing Bearing.....	DU 10x12.....	2
25.....	TS-1523011.....	Set Screw.....	M6x6.....	2
26.....	JWBS18B-1125-426	Plate.....		2
27.....	JWBS18B-1125-427	Nylon Piece.....		2
28.....	JWBS15-1120-425.....	Plastic Nylon Set Screw.....	M7x10.....	4


JWBS-18 Upper Wheel Assembly – Exploded View

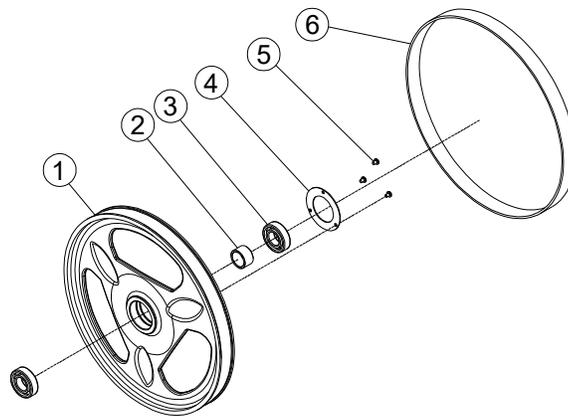

JWBS-18 Upper Wheel Assembly – Parts List

Index No	Part No	Description	Size	Qty
	PM1800B-018	Upper Wheel Assembly (#1 thru 6)		
1	PM1800B-018-01	Upper Wheel		1
2	PM1800B-018-02	Spacer		1
3	BB-6306LLU	Ball Bearing	6306LLU	2
4	PM1800B-018-04	Bearing Press Plate		1
5	PM1800B-018-05	Phillips Pan Head Machine Screw	M6 x 8	3
6	PM1800B-018-06	Tire		1


JWBS-18 Lower Wheel Assembly – Exploded View

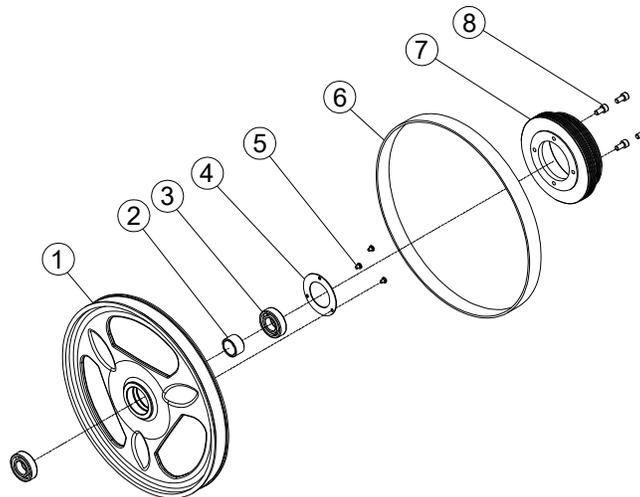

JWBS-18 Lower Wheel Assembly – Parts List

Index No	Part No	Description	Size	Qty
	JWBS18B-130	Lower Wheel Assembly (#1 thru 8)		
1	PM1800B-022-01	Lower Wheel	18"	1
2	PM1800B-018-02	Bushing		1
3	BB-6306LLU	Ball Bearing	6306LLU	2
4	PM1800B-018-04	Bearing Press Plate		1
5	PM1800B-018-05	Pan Head Bolt	M6x8	3
6	PM1800B-018-06	Tire	PU	1
7	JWBS18B-130-807	Pulley		1
8	TS-1504041	Hex Socket Cap Screw	M8x20	4


JWBS-18/20 Lower Blade Guide Assembly – Exploded View

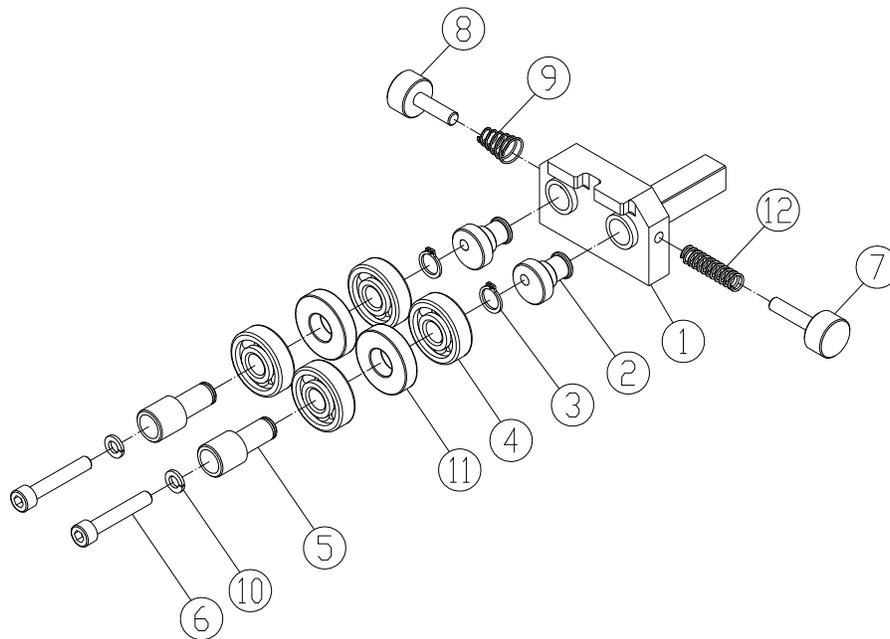

JWBS-18/20 Lower Blade Guide Assembly – Parts List

Index No	Part No	Description	Size	Qty
.....	JWBS18B-1142.....	Lower Blade Guide Assembly (#1 thru 12).....		
1.....	PM1500-096-01.....	Lower Blade Guide Support.....		1
2.....	PM1500-096-02.....	Eccentric Shaft.....		2
3.....	PM1800B-059-05.....	Retaining Ring.....	S15.....	2
4.....	BB-6202ZZ.....	Ball Bearing.....	6202ZZ.....	4
5.....	PM1800B-059-02.....	Knurled Adjusting Knob.....		2
6.....	TS-1503101.....	Socket Head Cap Screw.....	M6x45.....	2
7.....	PM1500-095-16.....	Lock Knob.....		1
8.....	JWBS15-1137-508... ..	Lock Knob.....		1
9.....	PM1800B-059-017... ..	Cone Spring.....		1
10.....	TS-2361061.....	Spring Washer.....	M6.....	2
11.....	PM1800B-059-04.....	Spacer.....		2
12.....	JWBS15-1138-332... ..	Spring.....		1


JWBS-18/20 Upper Blade Guide Assembly – Exploded View

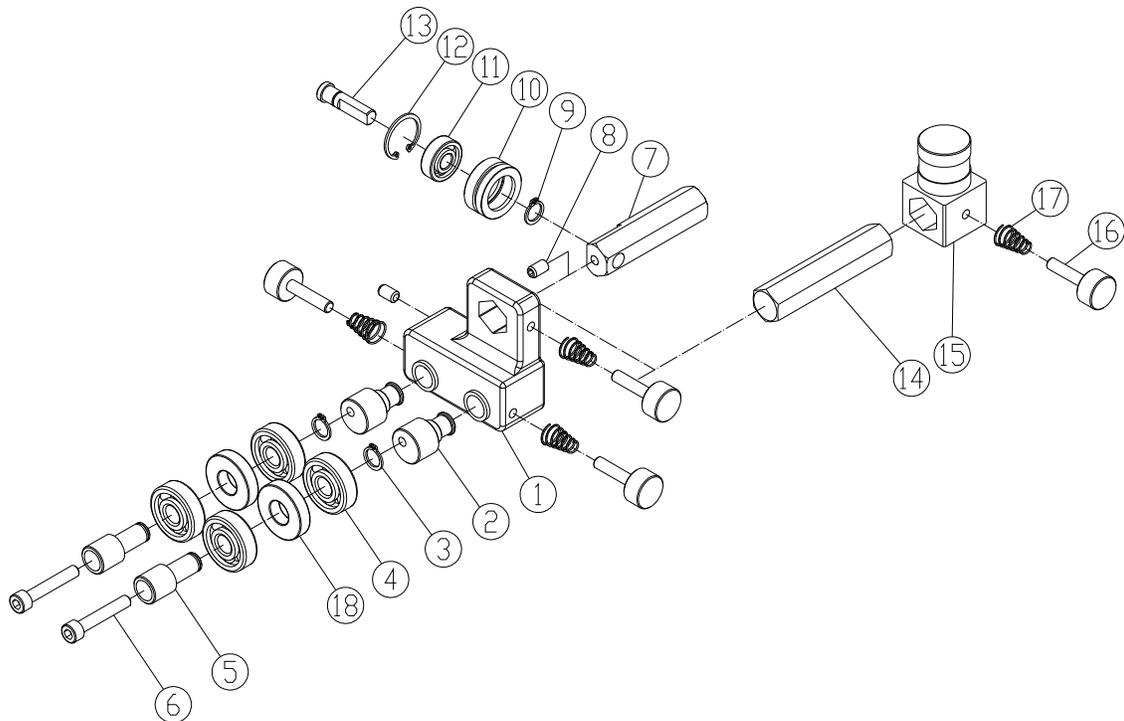

JWBS-18/20 Upper Blade Guide Assembly – Parts List

Index No	Part No	Description	Size	Qty
.....	JWBS18B-1126.....	Upper Blade Guide Assembly (#1 thru 18).....		
1.....	PM1500-095-01.....	Upper Blade Guide Support.....		1
2.....	PM1500-095-02.....	Eccentric Shaft.....		2
3.....	PM1800B-059-05.....	Retaining Ring.....	S15.....	2
4.....	BB-6202ZZ.....	Ball Bearing.....	6202ZZ.....	4
5.....	PM1800B-059-02.....	Knurled Knob.....		2
6.....	TS-1503101.....	Socket Head Cap Screw.....	M6x45.....	2
7.....	PM1500-095-07.....	Spacing Sleeve.....		1
8.....	TS-1523011.....	Set Screw.....	M6x6.....	2
9.....	PM1500-085-29.....	Retaining Ring.....	S8.....	1
10.....	PM1500-085-28.....	Thrust Bearing Holder.....		1
11.....	JWBS15-1121-611.....	Ball Bearing.....	608ZZ.....	1
12.....	PM1500-085-26.....	Retaining Ring.....	R22.....	1
13.....	PM1500-085-25.....	Adjust Shaft.....		1
14.....	PM1500-095-14.....	Hex Post.....		1
15.....	PM1500-095-15.....	Upper Guide Support Block.....		1
16.....	PM1500-095-16.....	Lock Knob.....		1
17.....	PM1800B-059-017.....	Cone Spring.....		4
18.....	PM1800B-059-04.....	Spacer.....		2


JWBS-18/20 Rip Fence Assembly – Exploded View

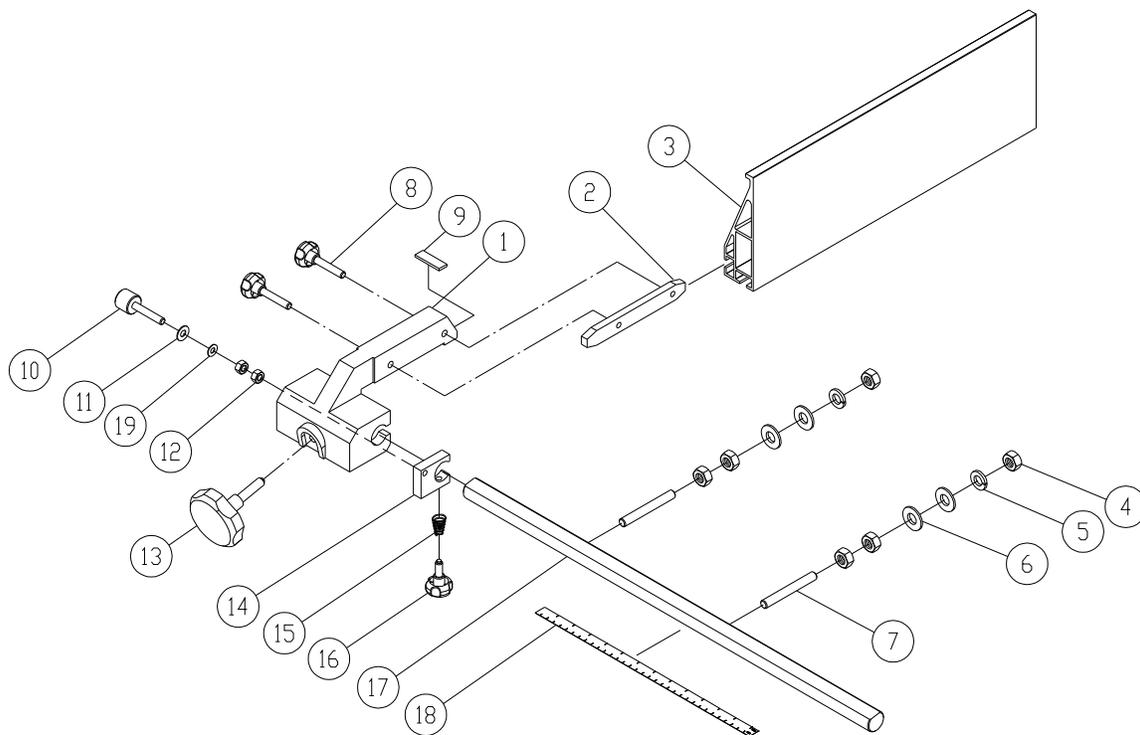

JWBS-18/20 Rip Fence Assembly – Parts List

Index No.	Part No.	Description	Size	Qty
.....	JWBS18B-1128.....	Rip Fence Assembly (#1 thru 18).....		1
1.....	JWBS15-1123-201...	Fence Body.....		1
2.....	JWBS15-1123-202...	Lock Block.....		1
3.....	JWBS18B-1128-203	Aluminum Fence	572mm.....	1
4.....	TS-2311101.....	Nut.....	M10.....	6
5.....	TS-2361101.....	Spring Washer.....	M10.....	2
6.....	TS-1550071.....	Flat Washer.....	M10.....	4
7.....	JWBS15-1123-207...	Set Screw.....	M10x80.....	2
8.....	JWBS15-1123-208...	Knob.....	M8x40.....	2
9.....	PM1500-107-10.....	Nylon Pad.....		1
10.....	JWBS15-1123-210...	Adjustment Knob.....	M8x50.....	1
11.....	JWBS15-1123-211...	Fiber Washer.....		1
12.....	TS-1540061.....	Nut.....	M8.....	2
13.....	JWBS15-1123-213...	Knob.....	M8x40.....	1
14.....	JWBS15-1123-214...	Locate Block.....		1
15.....	PM1800B-059-017...	Cone Spring.....		1
16.....	JWBS15-1123-216...	Knob.....	M6x14.....	1
17.....	JWBS18B-1128-217	Fence Guide Rail		1
18.....	JWBS18B-1128-218	Scale.....		1
19.....	JWBS15-1123-219...	Wave Washer.....	Ø8x13 mm.....	1

JWBS-15/18/20 Miter Gauge Assembly – Exploded View

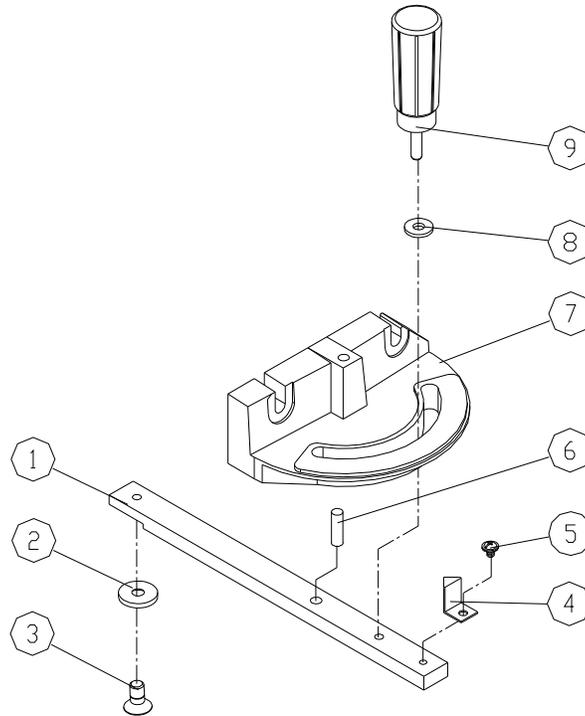


JWBS-15/18/20 Miter Gauge Assembly – Parts List

Index No	Part No	Description	Size	Qty
.....	JWBS15-1122.....	Miter Gauge Assembly (#1 thru 9).....		
1.....	JWBS15-1122-701...	Guide Bar.....		1
2.....	JWBS15-1122-702...	Guide Piece.....		1
3.....	JWBS15-1122-703...	Countersunk Bolt.....	M6x6.....	1
4.....	JWBS15-1122-704...	Pointer.....		1
5.....	PWBS14-251-5.....	Pan Head Flanged Screw.....	M5x8.....	1
6.....	JWBS15-1122-706...	Steel Pin.....	Ø6x10mm.....	1
7.....	JWBS15-1122-707...	Miter Gauge Body.....		1
8.....	JWBS15-1122-708...	Nylon Washer.....		1
9.....	JWBS15-1122-709...	Handle.....		1


Electrical Connections

JWBS-18-M.....714700M~230,50Hz

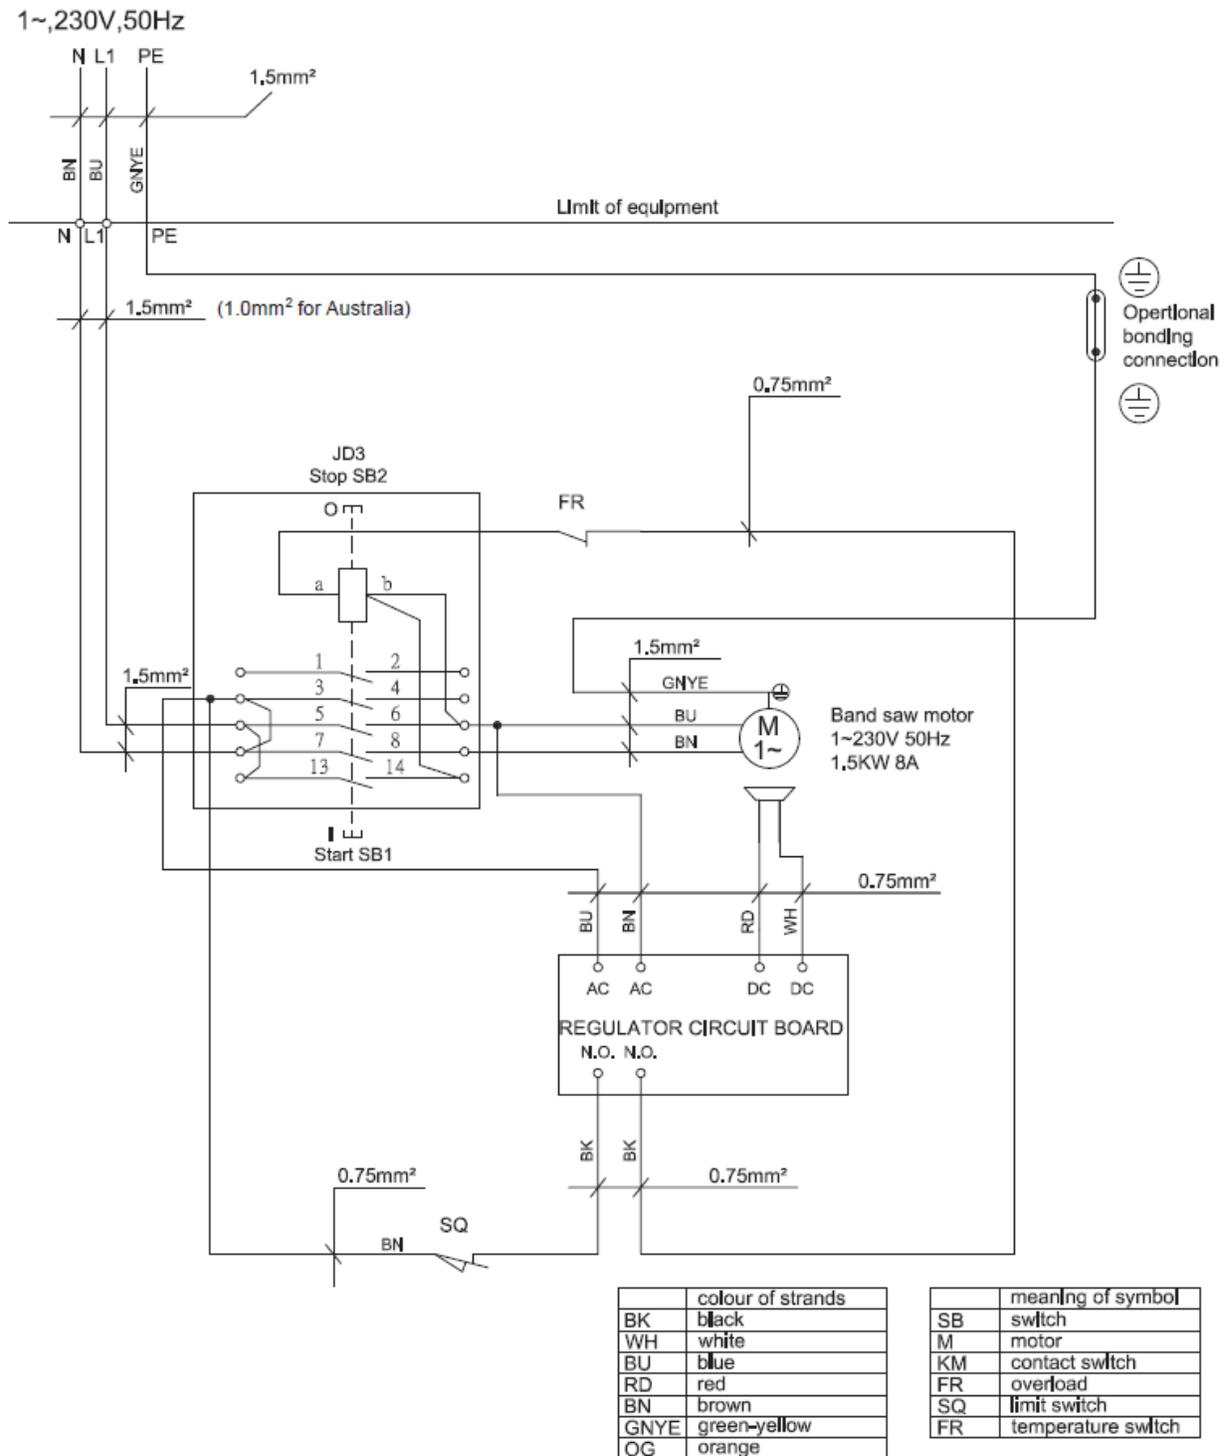

Electrical Connections

JWBS-18T.....714750T3~400,50Hz

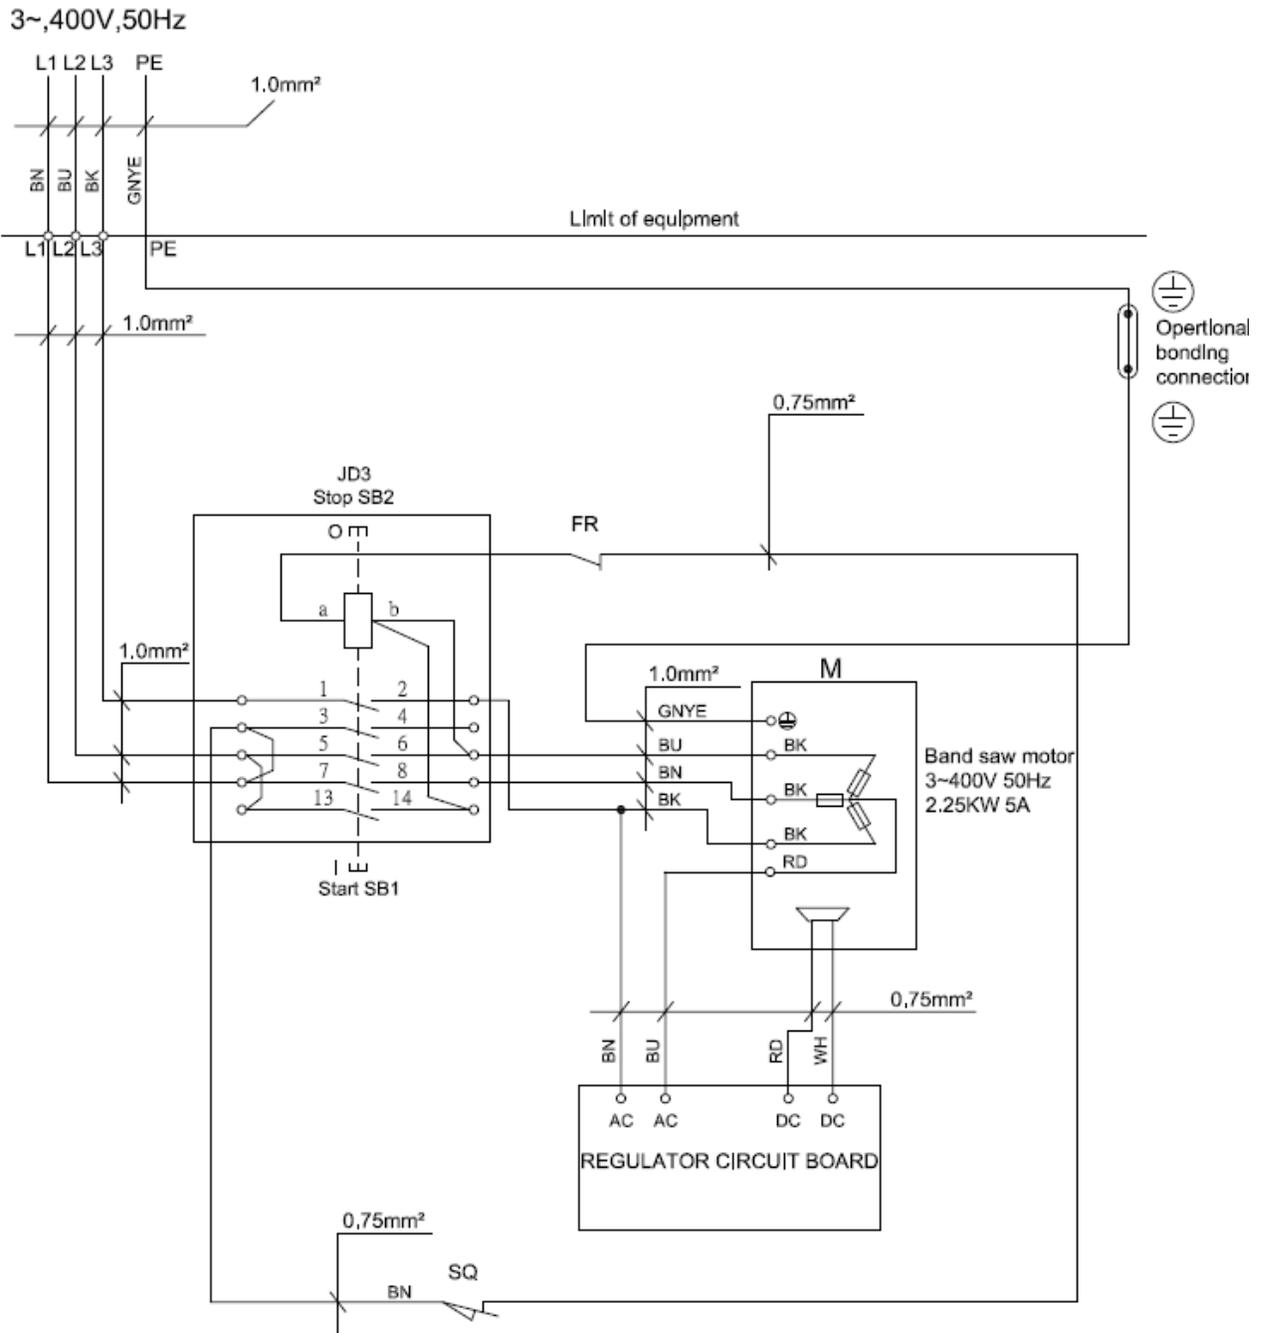

	colour of strands
BK	black
WH	white
BU	blue
RD	red
BN	brown
GNYE	green-yellow
OG	orange

	meaning of symbol
SB	switch
M	motor
KM	contact switch
FR	overload
SQ	limit switch
FR	temperature switch